

Assembly Instructions

Mid-Century Modern Wood Side Table

 
 
SKU: 310200



Follow these instructions to assemble your product easily and safely

The Parts

Identify all parts before starting assembly. Each part is labeled with a sticker for easy reference.

Description	Qty	
A Top Panel	1	
B Right Side Frame	1	
C Left Side Frame	1	
D Bottom Panel	1	
E Back Panel	1	
F Support Bar	1	
G Front Drawer Panel	1	
H Back Drawer Panel	1	
I Right - Side Drawer Panel	1	
J Left - Side Drawer Panel	1	
K Bottom Drawer Panel	1	

- **Estimated time for assembly**

≥ 20 minute

 
- **Do not use power tools**



- **Use the packaging carton as a working surface to prevent scratches or damage during assembly.**


The Hardware

Check that all hardware components are included before assembly. Extras are provided in case of loss.

Description	Qty	
1 M6x35mm Hex Button Head Bolt	8 + 2 Extra	
2 M6 Lock Washer	8 + 2 Extra	
3 M6 Flat Washer	8 + 2 Extra	
4 Cam Bolt	2 + 2 Extra	
5 Cam Lock	2 + 2 Extra	
6 Wooden Dowel	4 + 2 Extra	
7 M4x25mm Screw	8 + 2 Extra	
8 M4x35mm Screw	2 + 2 Extra	
9 Allen Key	1	
10 Leveler	2 Extra	
11 Handle	1 + 1 Extra	

The product

Exploded View

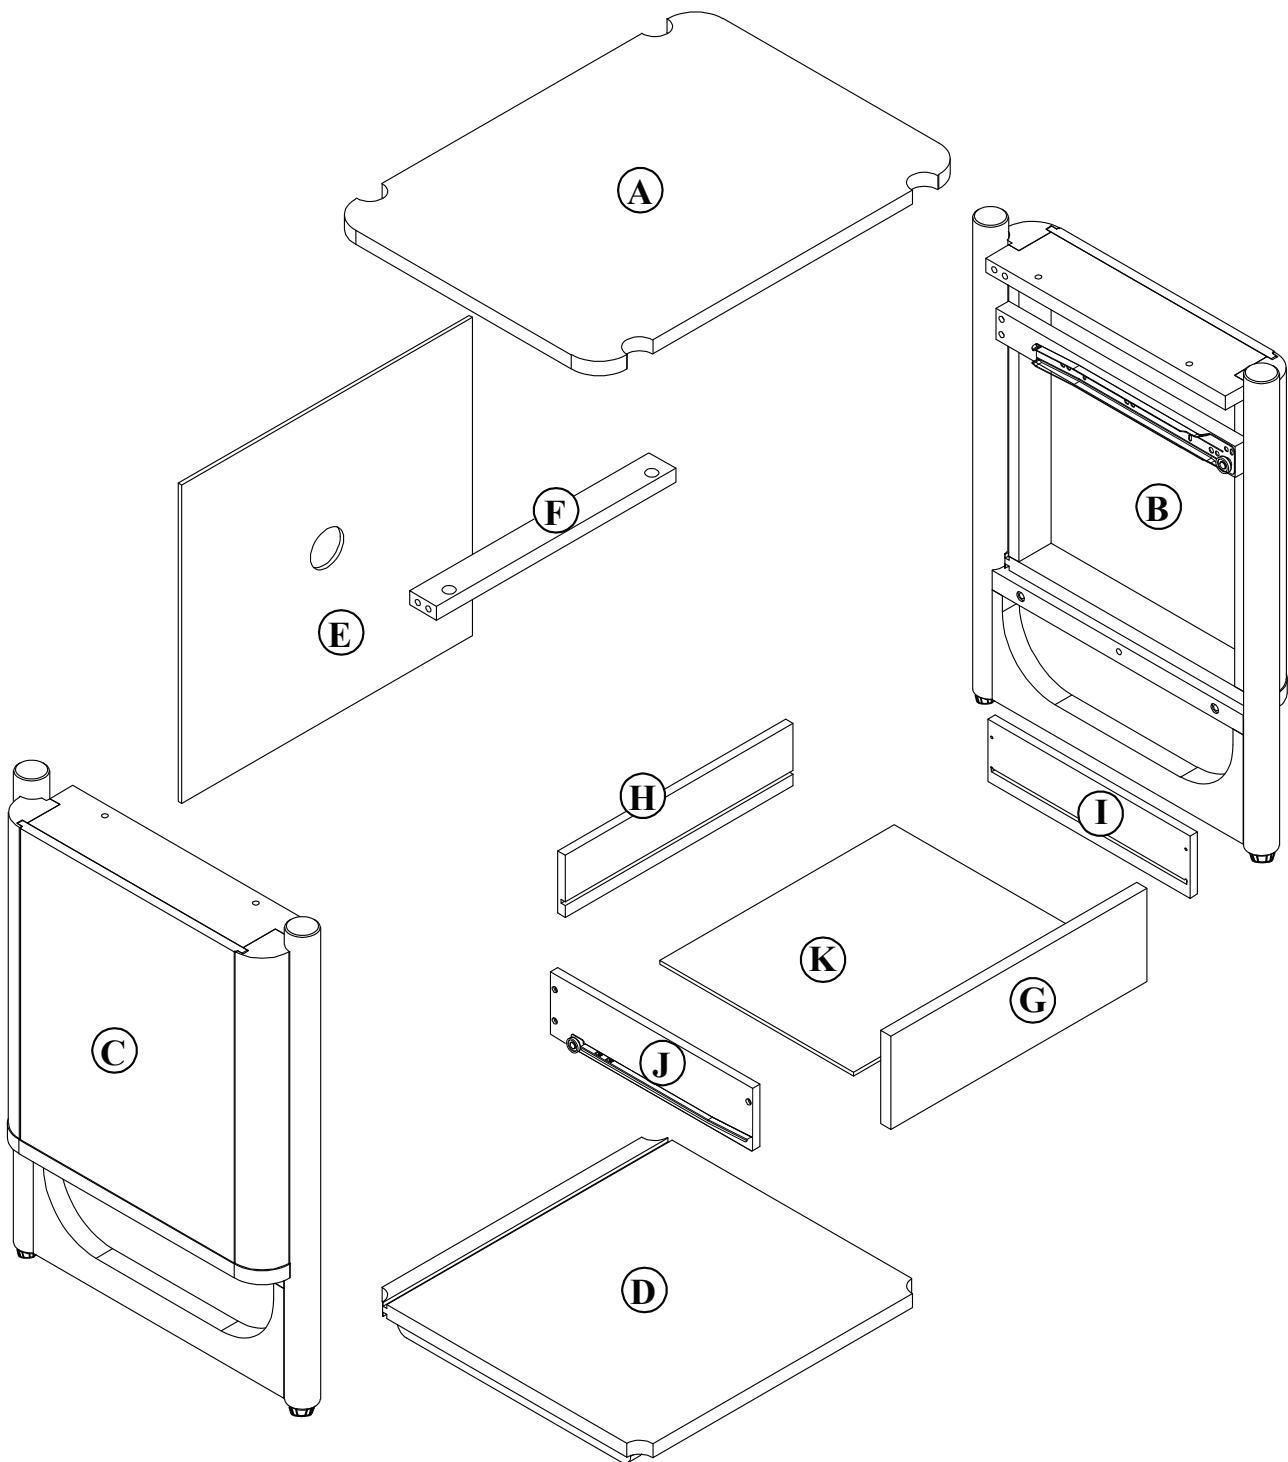


IMPORTANT

- Do not tighten bolts / screws completely until all bolts / screws are line up and inserted into holes
- Do not over tighten bolts to avoid stripping.
- Please use hand tools to assemble this product. Do not use power tools.

Step 1

Insert Cam Bolts (4) into the Right Side Frame (B) and Left Side Frame (C).


(4)
x2

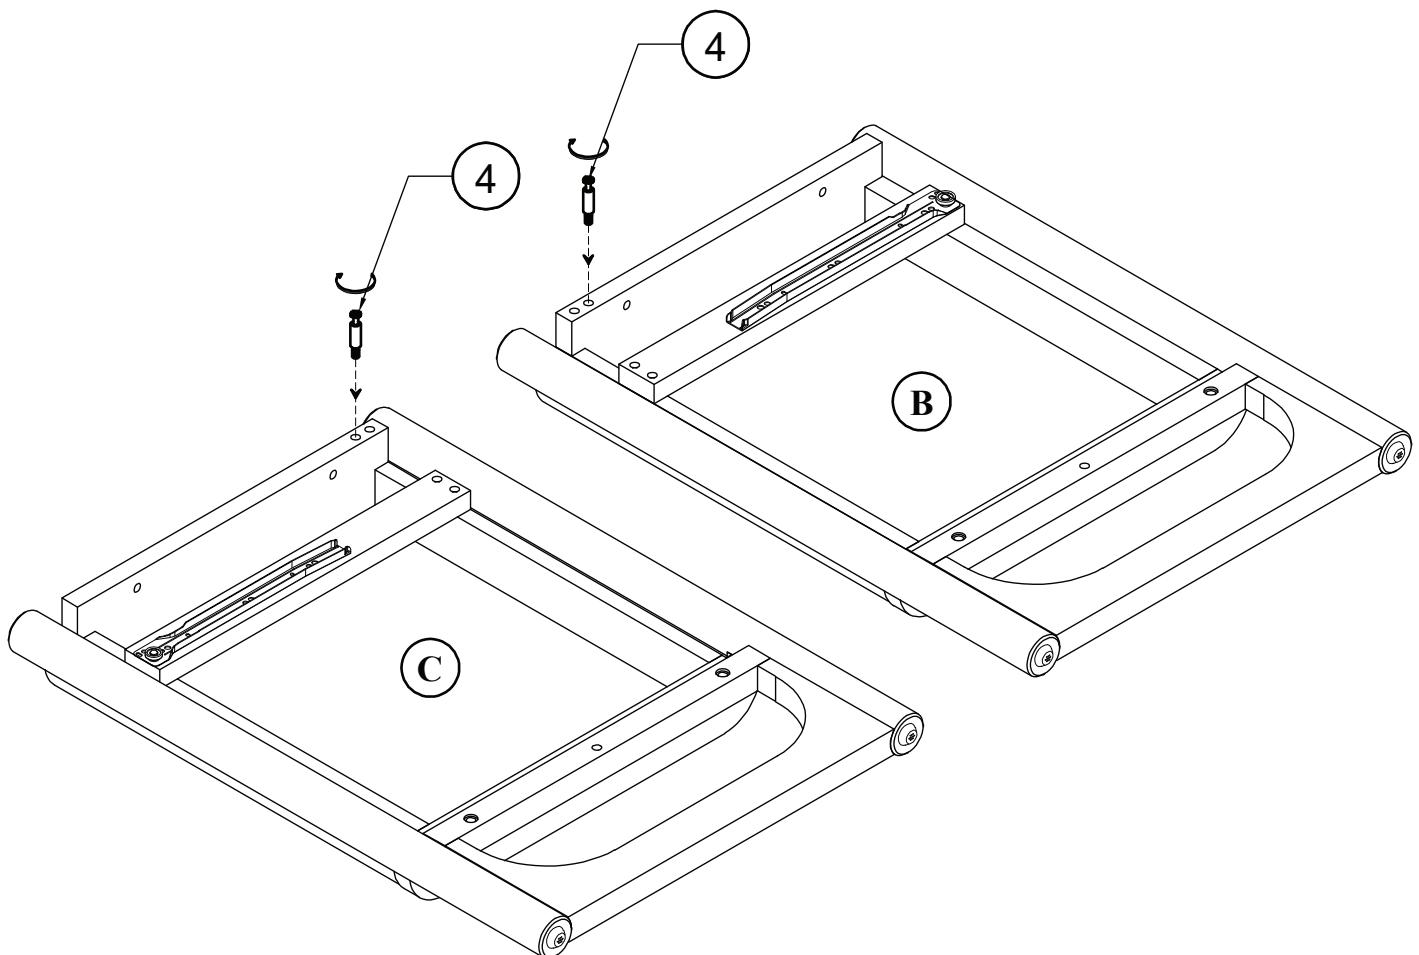

How to use cam locks


Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.

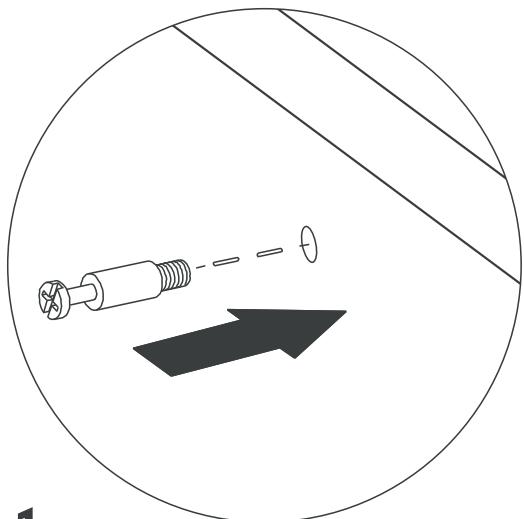


1

Screw the cam bolt into panel

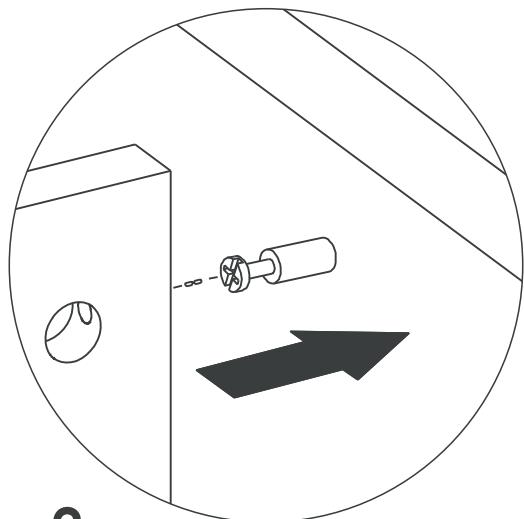


2

Slide the joint panel onto the cam bolt

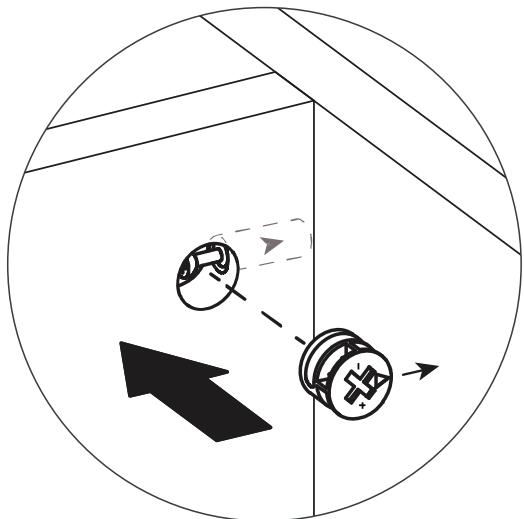

3

Align the cam lock with its side opening (or arrow) pointing to cam bolt

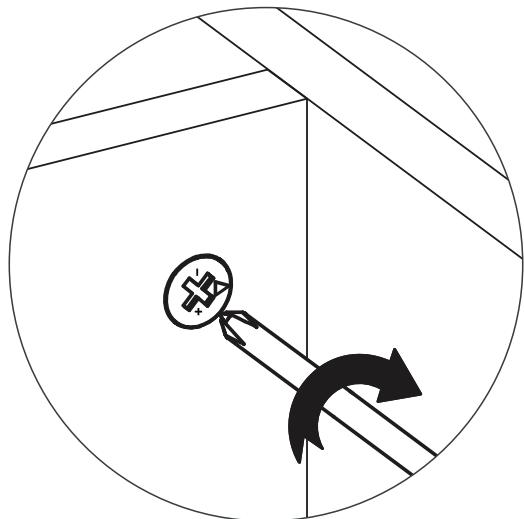

4


Turn the cam lock clockwise gently until it will not turn any more

Still having issues?



If the cam lock spins or won't catch, remove and reinstall it, making sure everything is aligned. If it still doesn't work, remove the cam lock and loosen the cam bolt slightly to adjust alignment.

Step 2

Connect the Support Bar (F) to the Right Side Frame (B) using Cam Locks (5) and Wooden Dowels (6).


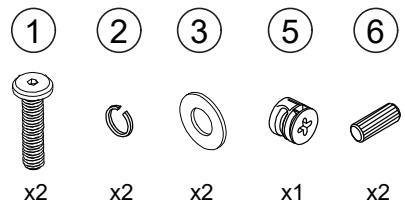


Then attach the Bottom Panel (D) to the Right Side Frame (B) using M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3). Insert Wooden Dowels (6) to secure the panel firmly in place.

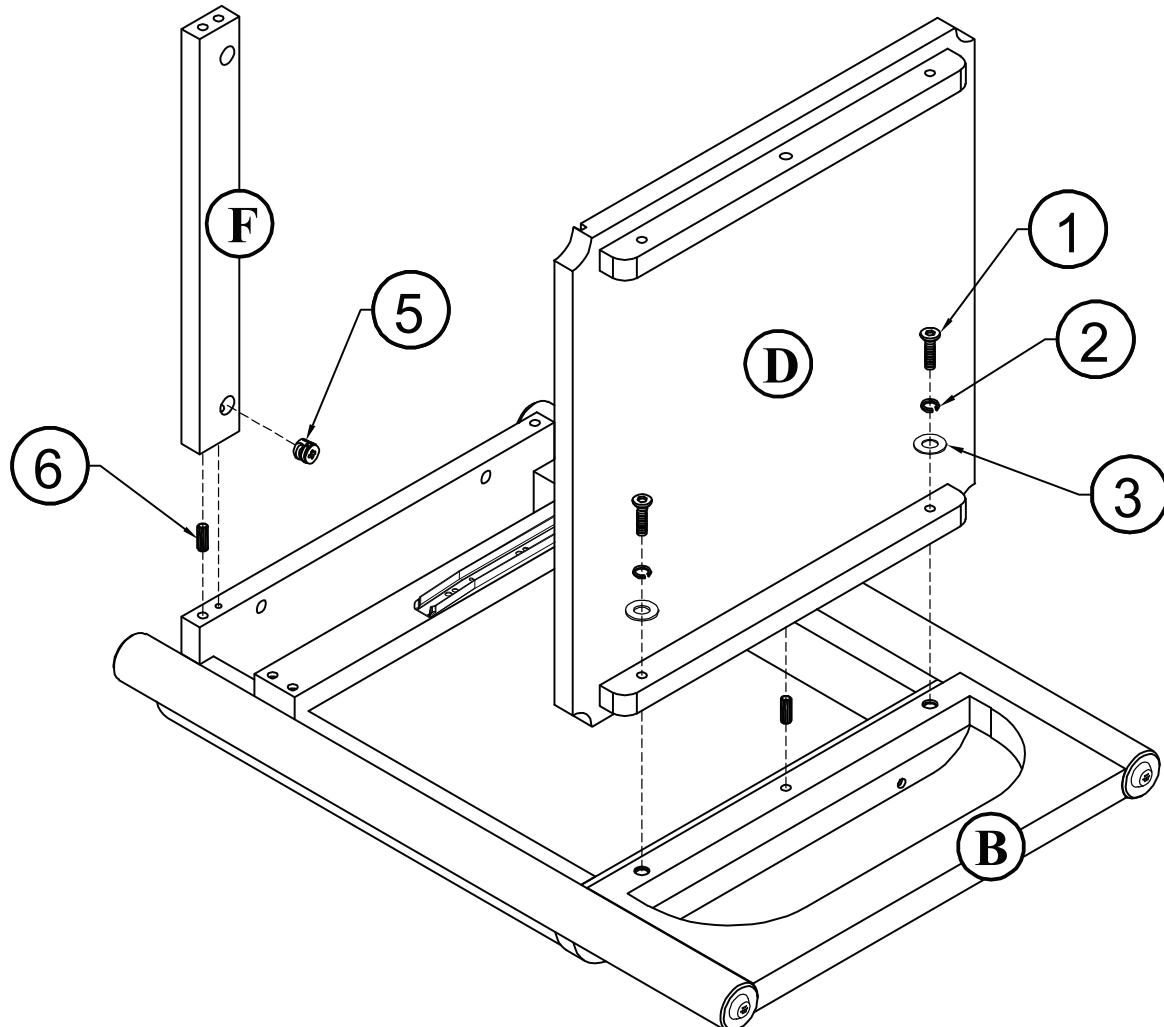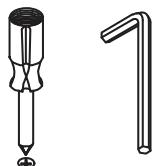


Step 3

Attach the Left Side Frame (C) to the assembly using Cam Locks (5), M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3). Secure the position with Wooden Dowels (6).

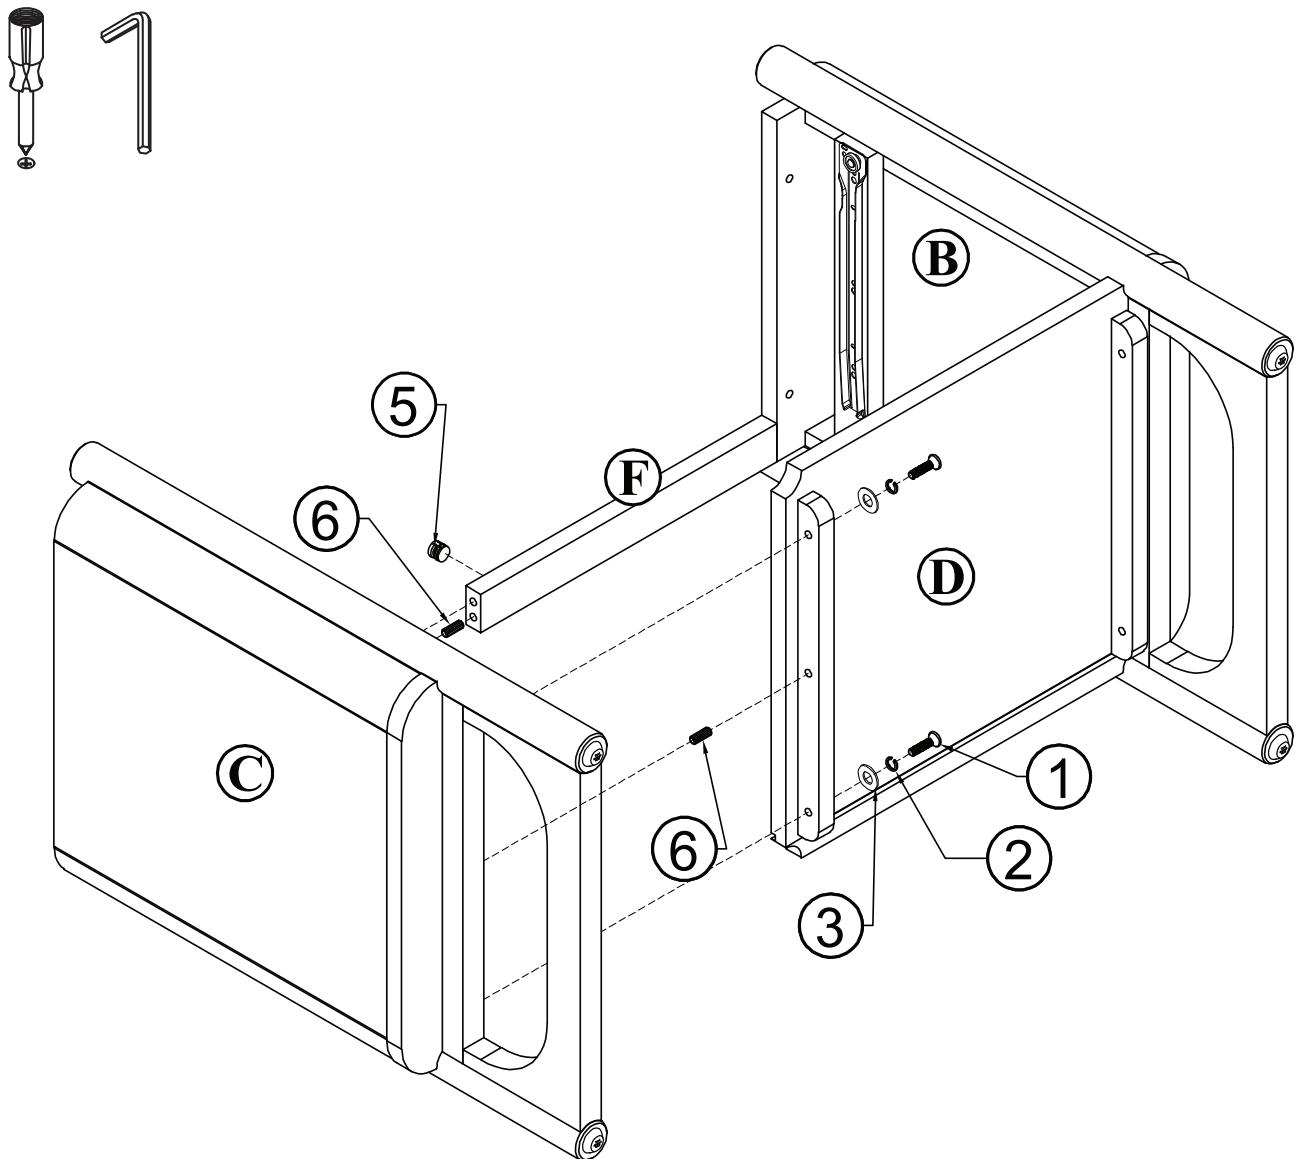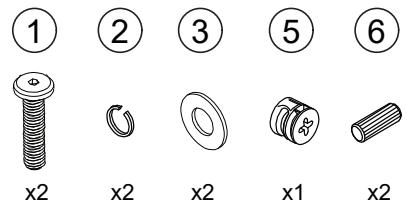



Step 4

Slide the Back Panel (E) down into the grooves of the Left Side Frame (C) and Right Side Frame (B), ensuring it fits securely onto the Bottom Panel (D).

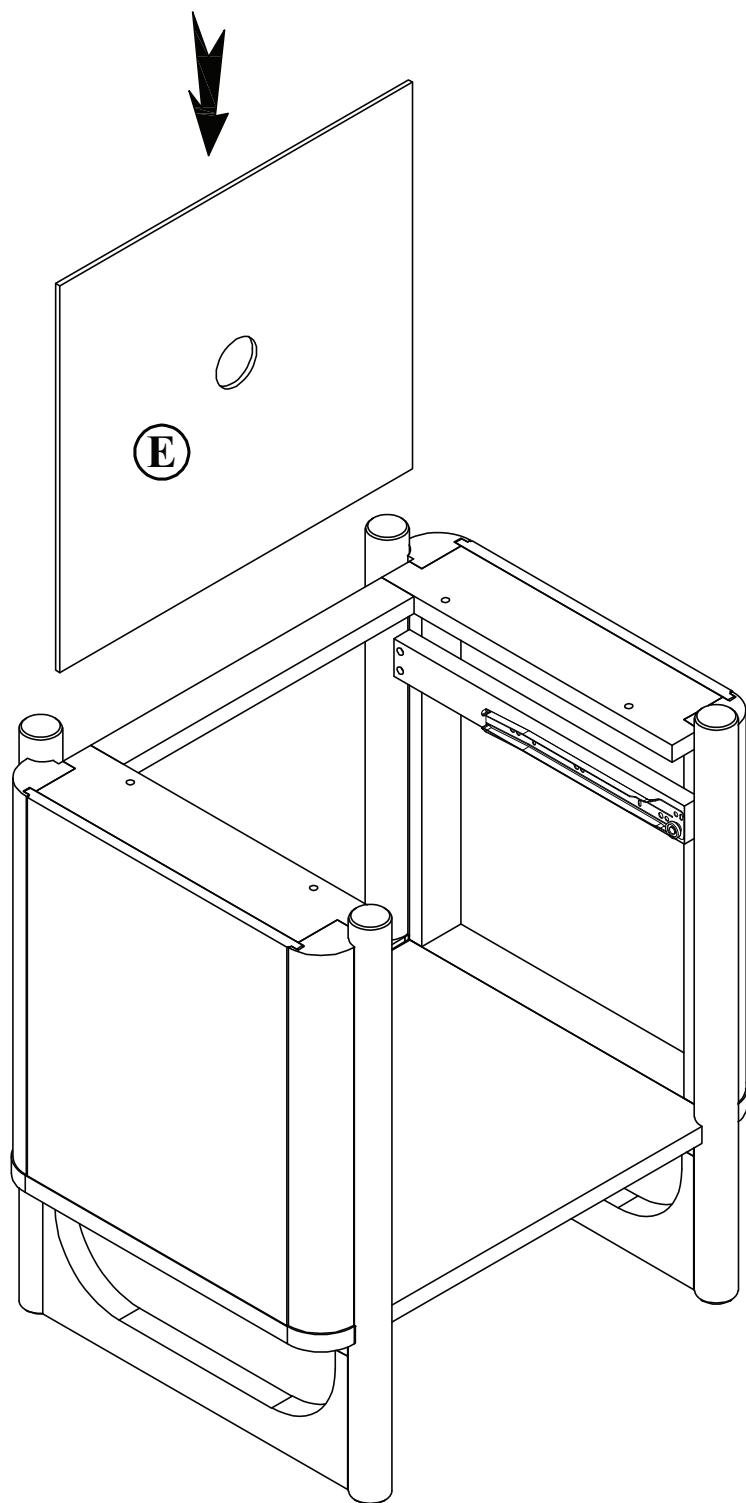


Step 5

Attach the Top Panel (A) to the nightstand assembly using M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3).

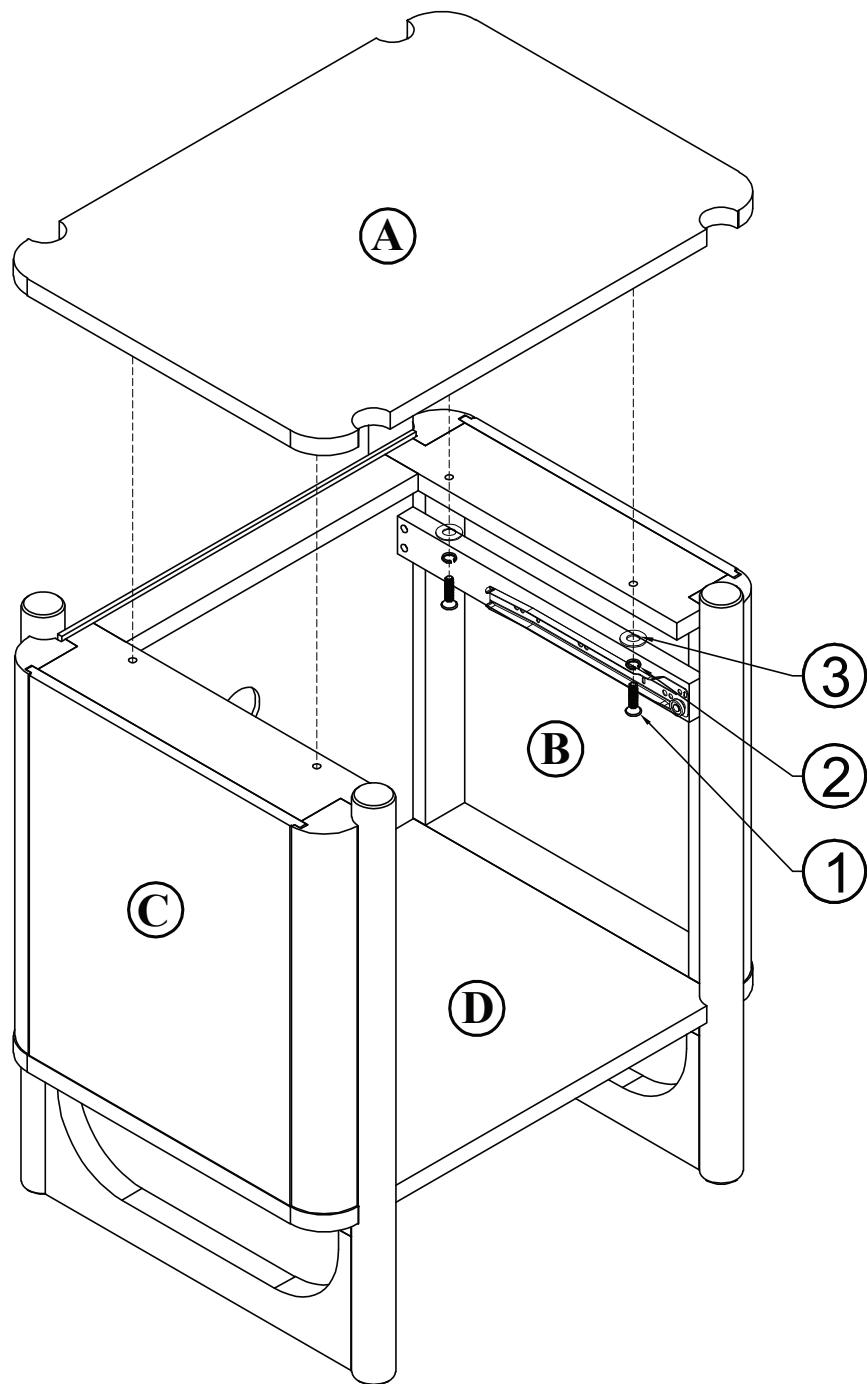
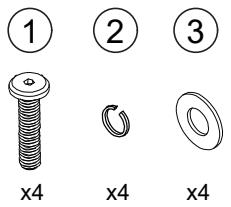


Step 6

Attach the Handle (11) to the Front Drawer Panel (G) using M4x35mm Screws (8).

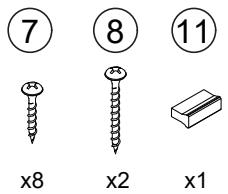


Assemble the drawer by securing the Right Side Drawer Panel (I) and Left Side Drawer Panel (J) using M4x25mm Screws (7).

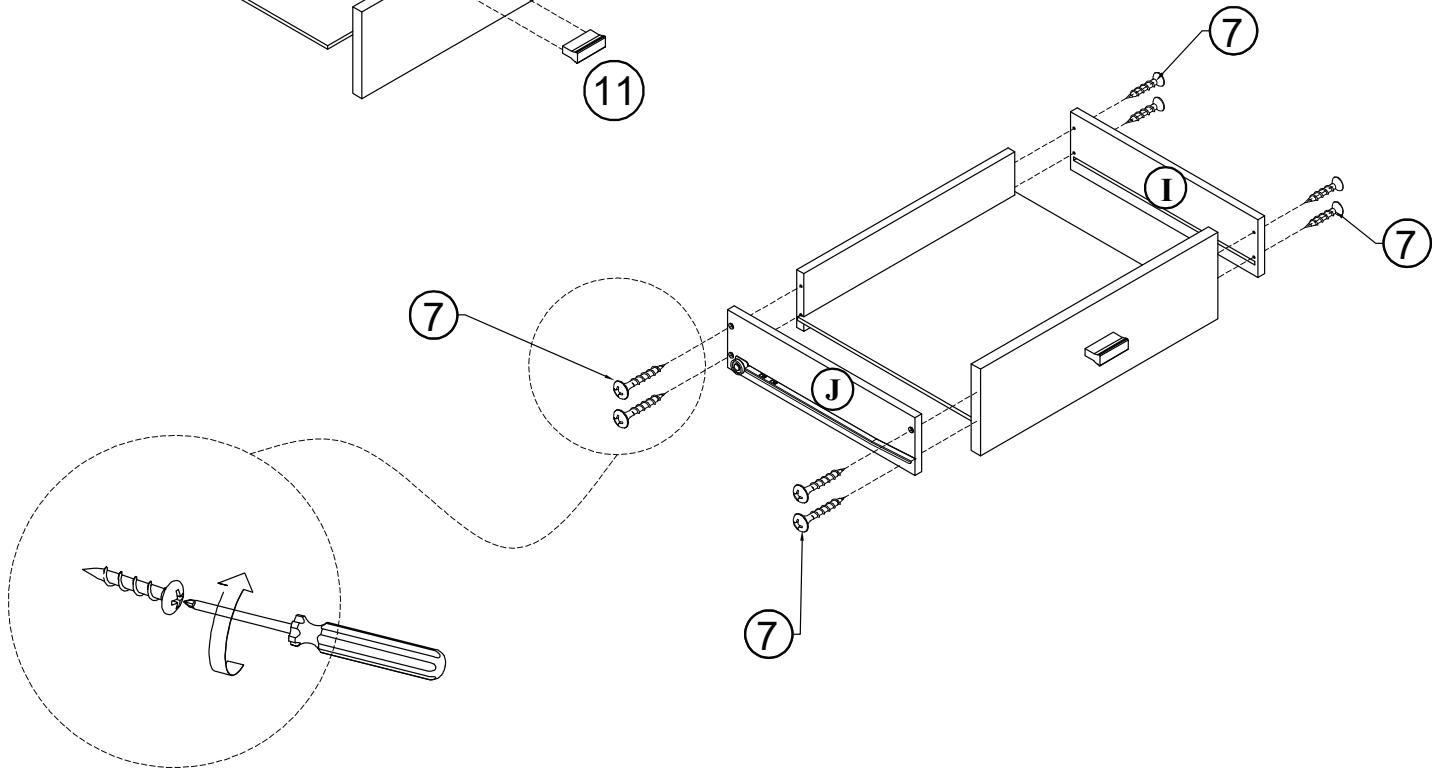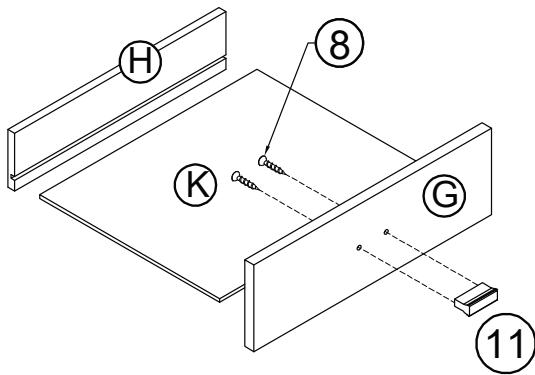

Step 7


Slide the drawer into the nightstand, making sure the inner drawer slides align with the outer slides attached to the nightstand. Push the drawer fully in until both slides lock smoothly into place

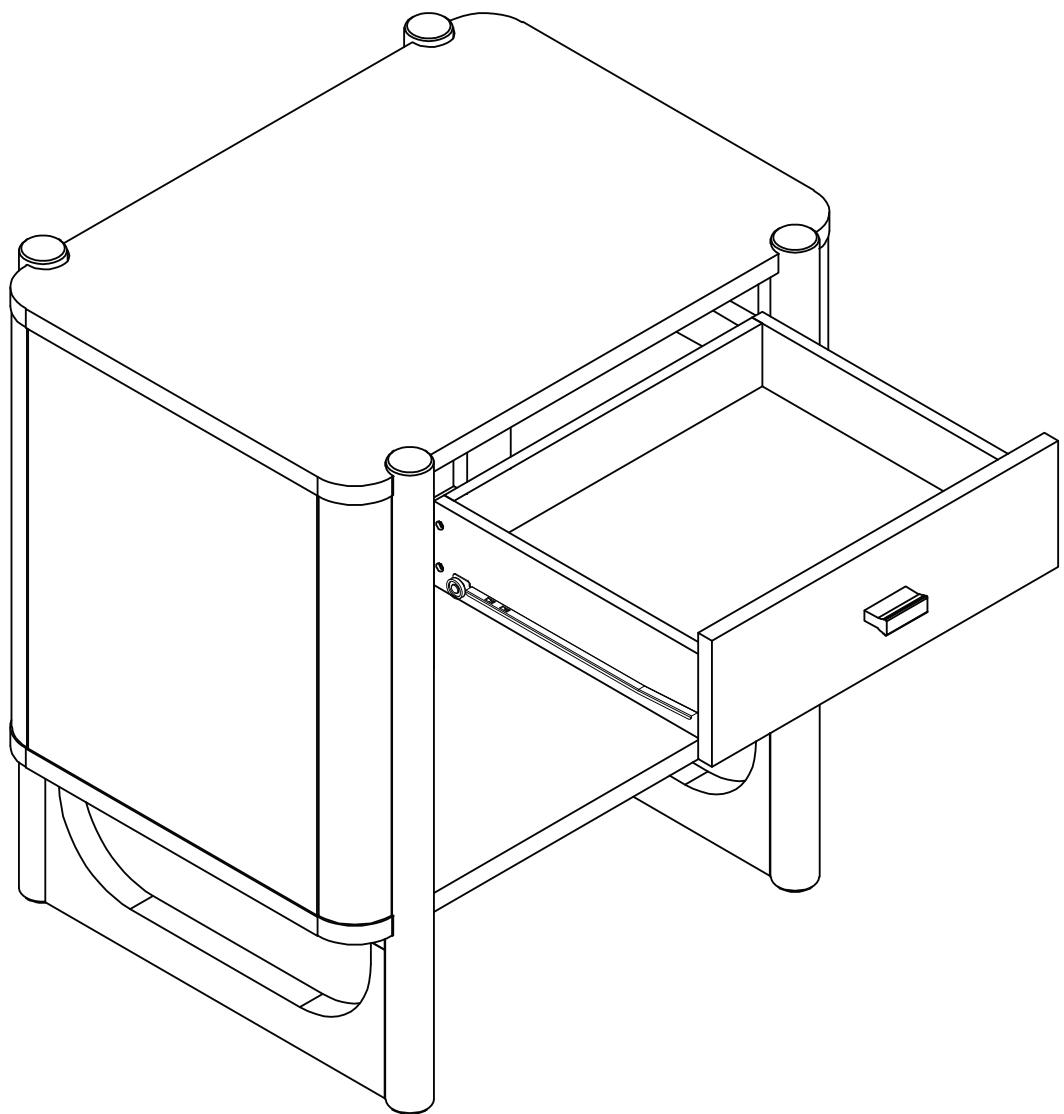

Step 8


Fully tightening everything to 100%.

Ensure all legs are touching the ground by using Leveler.

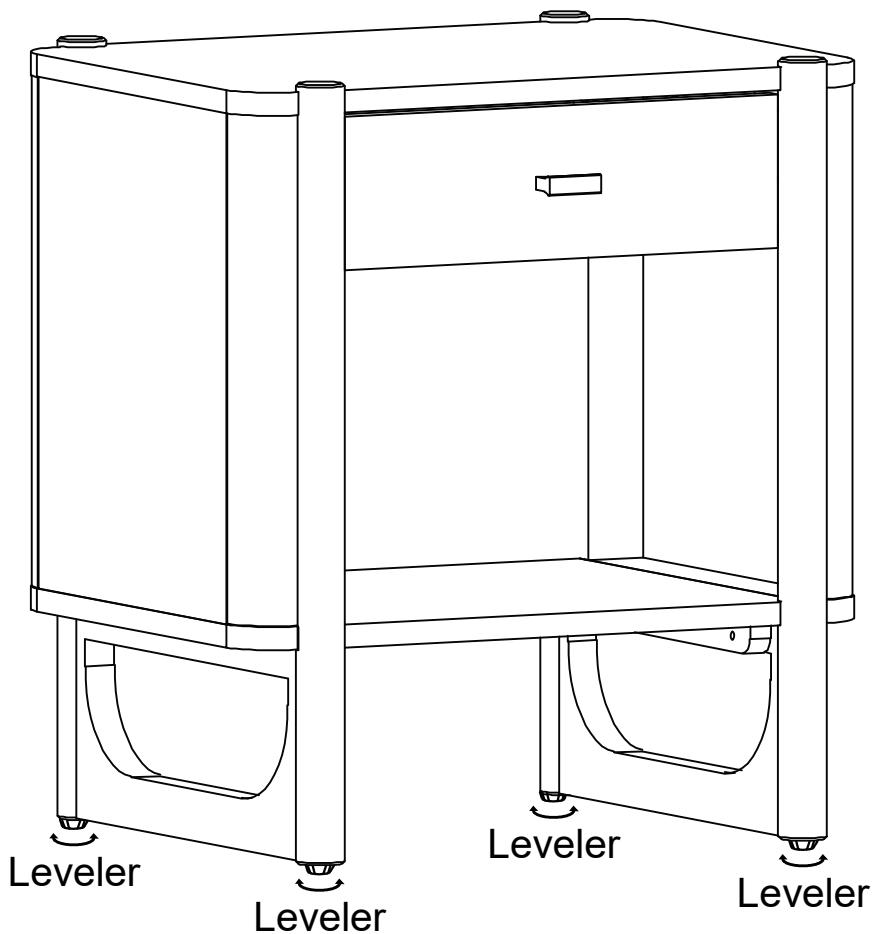

All Set for Everyday Use

Weight Limitation
 **TOTAL 57 lbs**

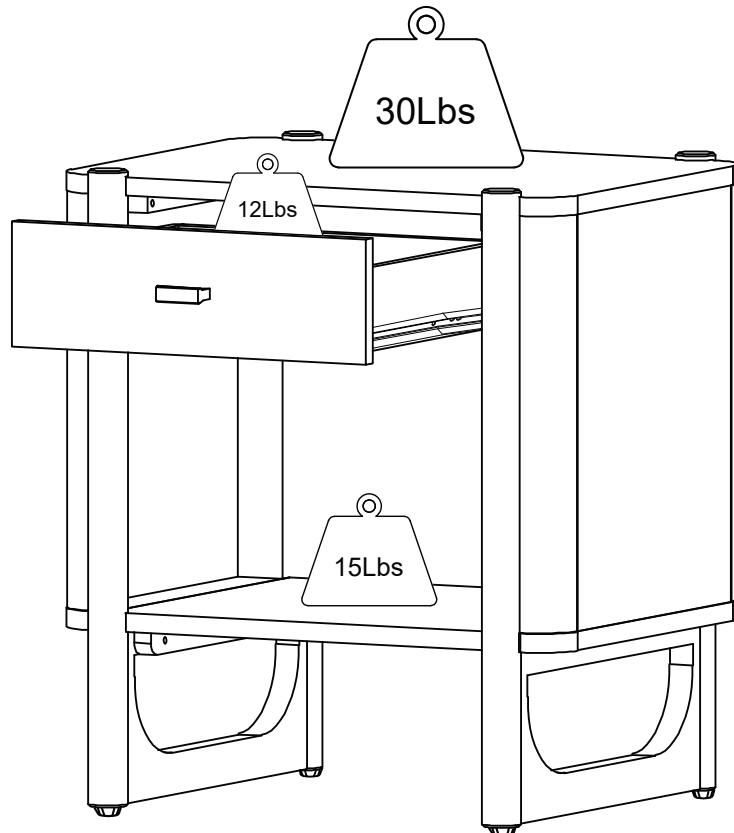

Important usage guidelines

- DO NOT** - Modify the structure of this product
- DO NOT** - Use for commercial purposes
- DO NOT** - Leave spilled liquids on this product
- DO NOT** - Use the product if it is damaged
- DO NOT** - Perform temporary repairs
- DO NOT** - Use outdoors