


# Assembly Instructions

---

## Mid-Century Modern Wood Accent Cabinet

 
 

SKU: 700300

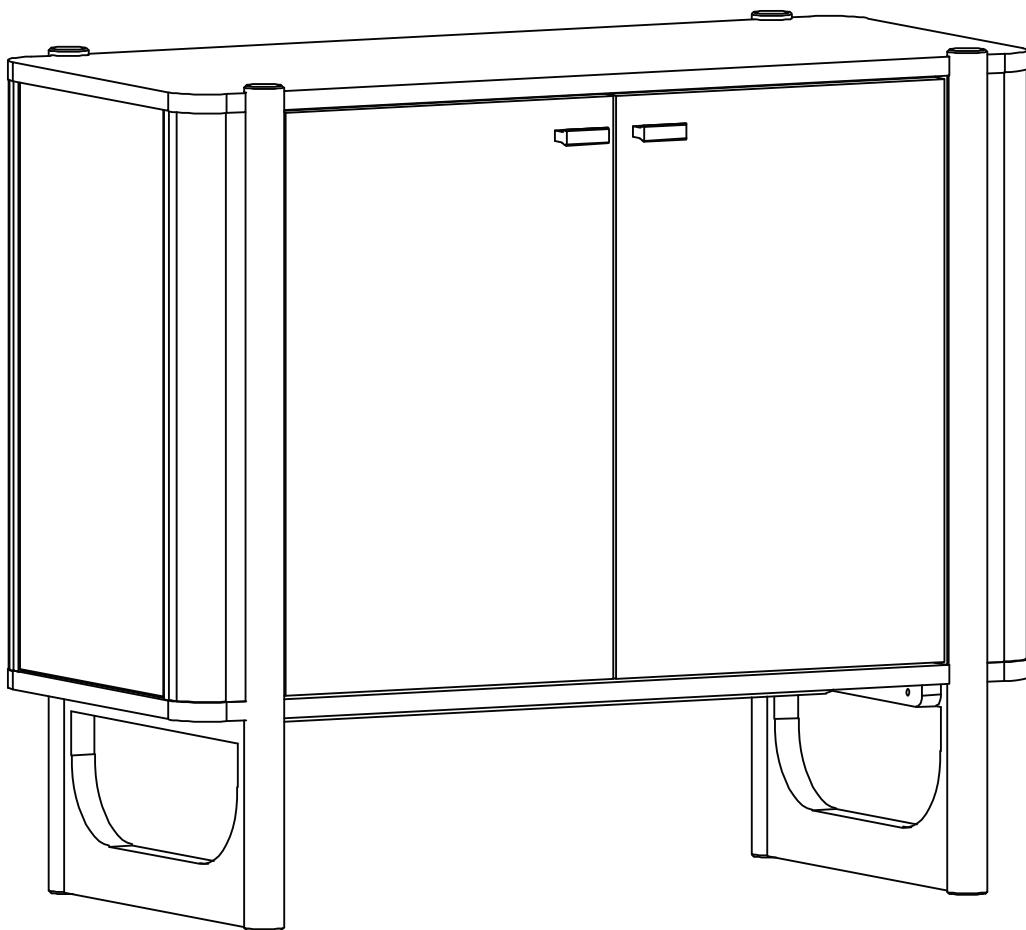

**Follow these instructions to assemble your product easily and safely**

# The Parts

Identify all parts before starting assembly. Each part is labeled with a sticker for easy reference.

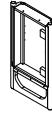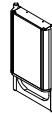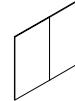Description	Qty	
A Top Panel	1	
B Right Side Frame	1	
C Left Side Frame	1	
D Bottom Panel	1	
E Back Panel	1	
F Left Door	1	
G Right Door	1	
H Support Bar	2	
I Adjustable Shelf	1	

- **Estimated time for assembly**

**≥ 30 minute**

- **Do not use power tools**



- **Use the packaging carton as a working surface to prevent scratches or damage during assembly.**


# The Hardware

Check that all hardware components are included before assembly. Extras are provided in case of loss.

Description	Qty
1 M6x35 Hex Button Head Bolt	8 + 2 Extra
Bolt	
2 M6 Lock Washer	8 + 2 Extra
Washer	
3 M6 Flat Washer	8 + 2 Extra
Washer	
4 Cam Bolt	4 + 2 Extra
Bolt	
5 Cam Lock	4 + 2 Extra
Lock	
6 Wooden Dowel	10 + 2 Extra
Dowel	
7 Shelf Pin	4 + 2 Extra
Pin	
8 M4x15mm Screw	8+ 2 Extra
Screw	
9 M4x30mm Screw	4 + 2 Extra
Screw	
10 Hinge	4
Hinge	
11 M3.5x15mm Screw	24
Screw	
12 Allen Key	1
Allen Key	
13 Magnetic Catch	2
Magnetic Catch	
14 Mounting bracket	2
Mounting bracket	
15 Tipping Restraint	1
Tipping Restraint	
16 Longer Screw M4x40mm	2
Screw	
17 Shorter Screw M4x20mm	2
Screw	
18 Wall Plug	2
Wall Plug	
19 Leveler	2 Extra
Leveler	
20 Handle	2 + 2 Extra
Handle	

# The product

## Exploded View


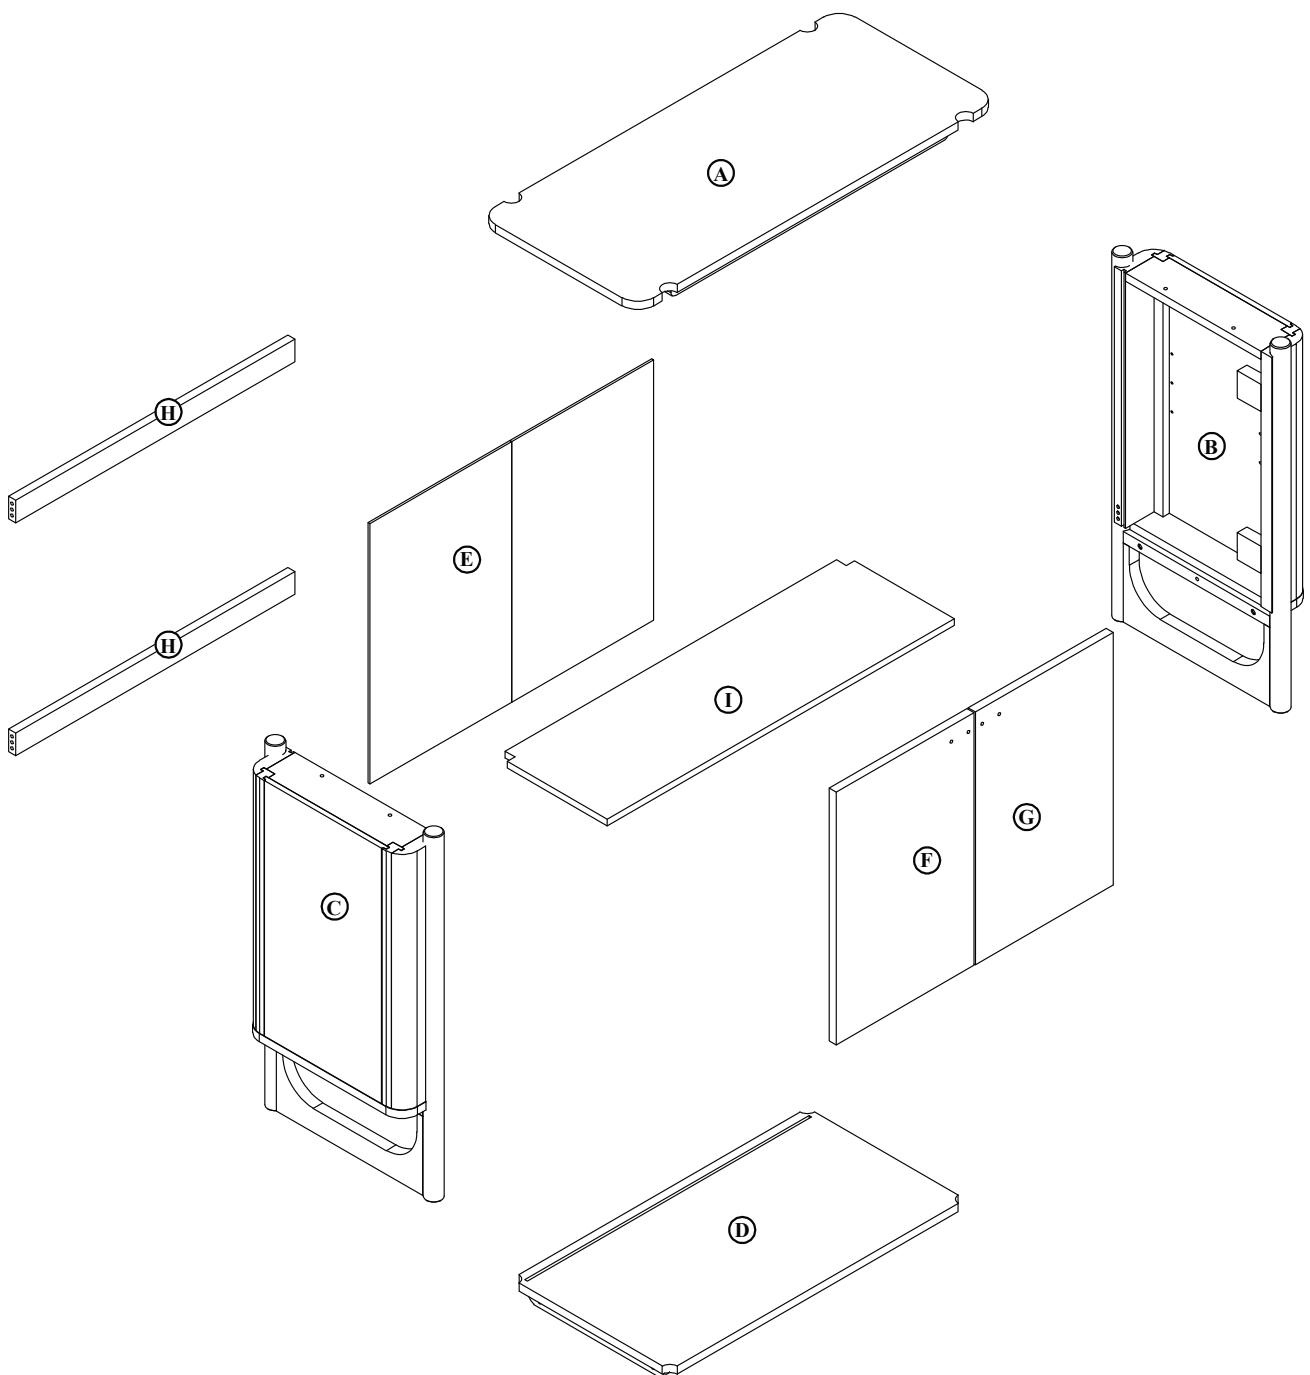


### IMPORTANT

- Do not tighten bolts / screws completely until all bolts / screws are line up and inserted into holes
- Do not over tighten bolts to avoid stripping.
- Please use hand tools to assemble this product. Do not use power tools.

# Step 1

 
Insert Cam Bolts (4) into the Right Side Frame (B) and Left Side Frame (C).

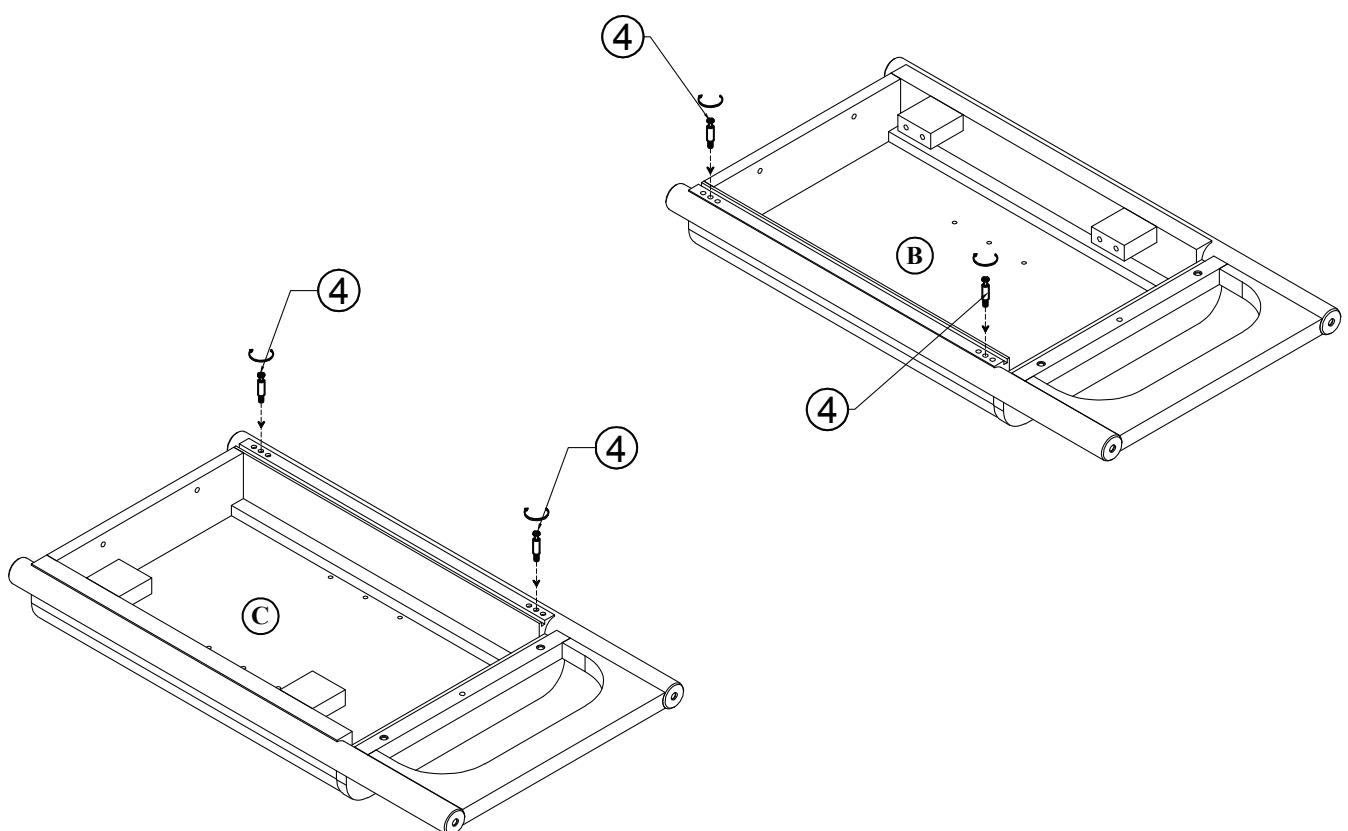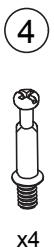

# How to use cam locks


## Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.

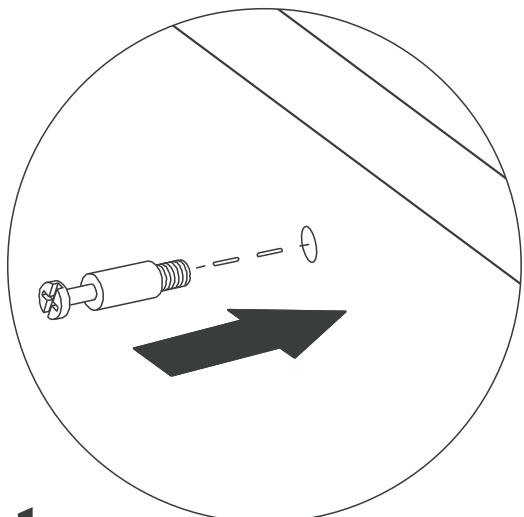


1

Screw the cam bolt into panel

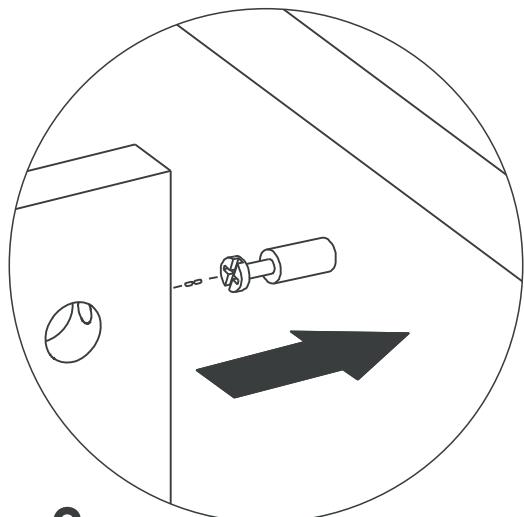


2

Slide the joint panel onto the cam bolt

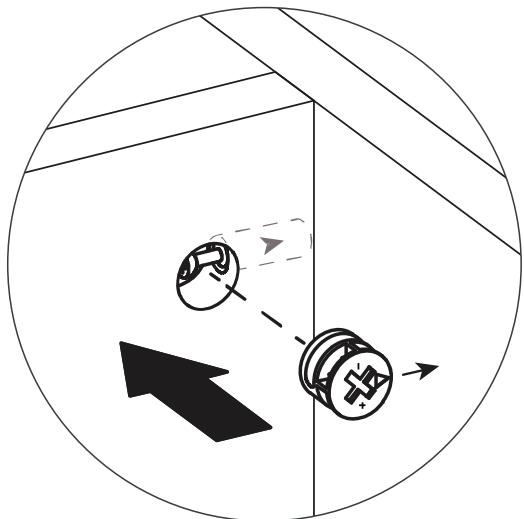

3

Align the cam lock with its side opening (or arrow) pointing to cam bolt

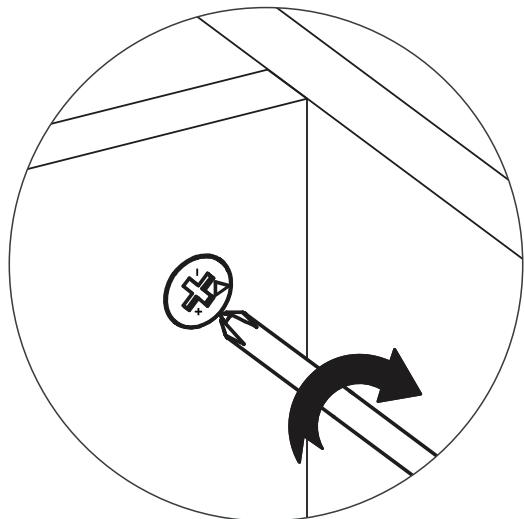

4


Turn the cam lock clockwise gently until it will not turn any more

## Still having issues?


If the cam lock spins or won't catch, remove and reinstall it, making sure everything is aligned. If it still doesn't work, remove the cam lock and loosen the cam bolt slightly to adjust alignment.

# Step 2

Attach the Support Bar (H) to the Right Side Frame (B) using Cam Locks (5) and Wooden Dowels (6). Ensure proper alignment before tightening.

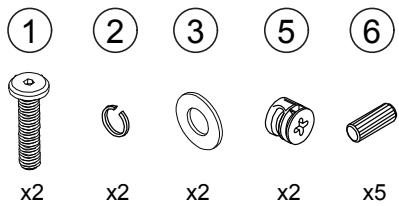


Then attach the Bottom Panel (D) to the Right Side Frame (B) using M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3). Insert Wooden Dowels (6) to lock the position securely.

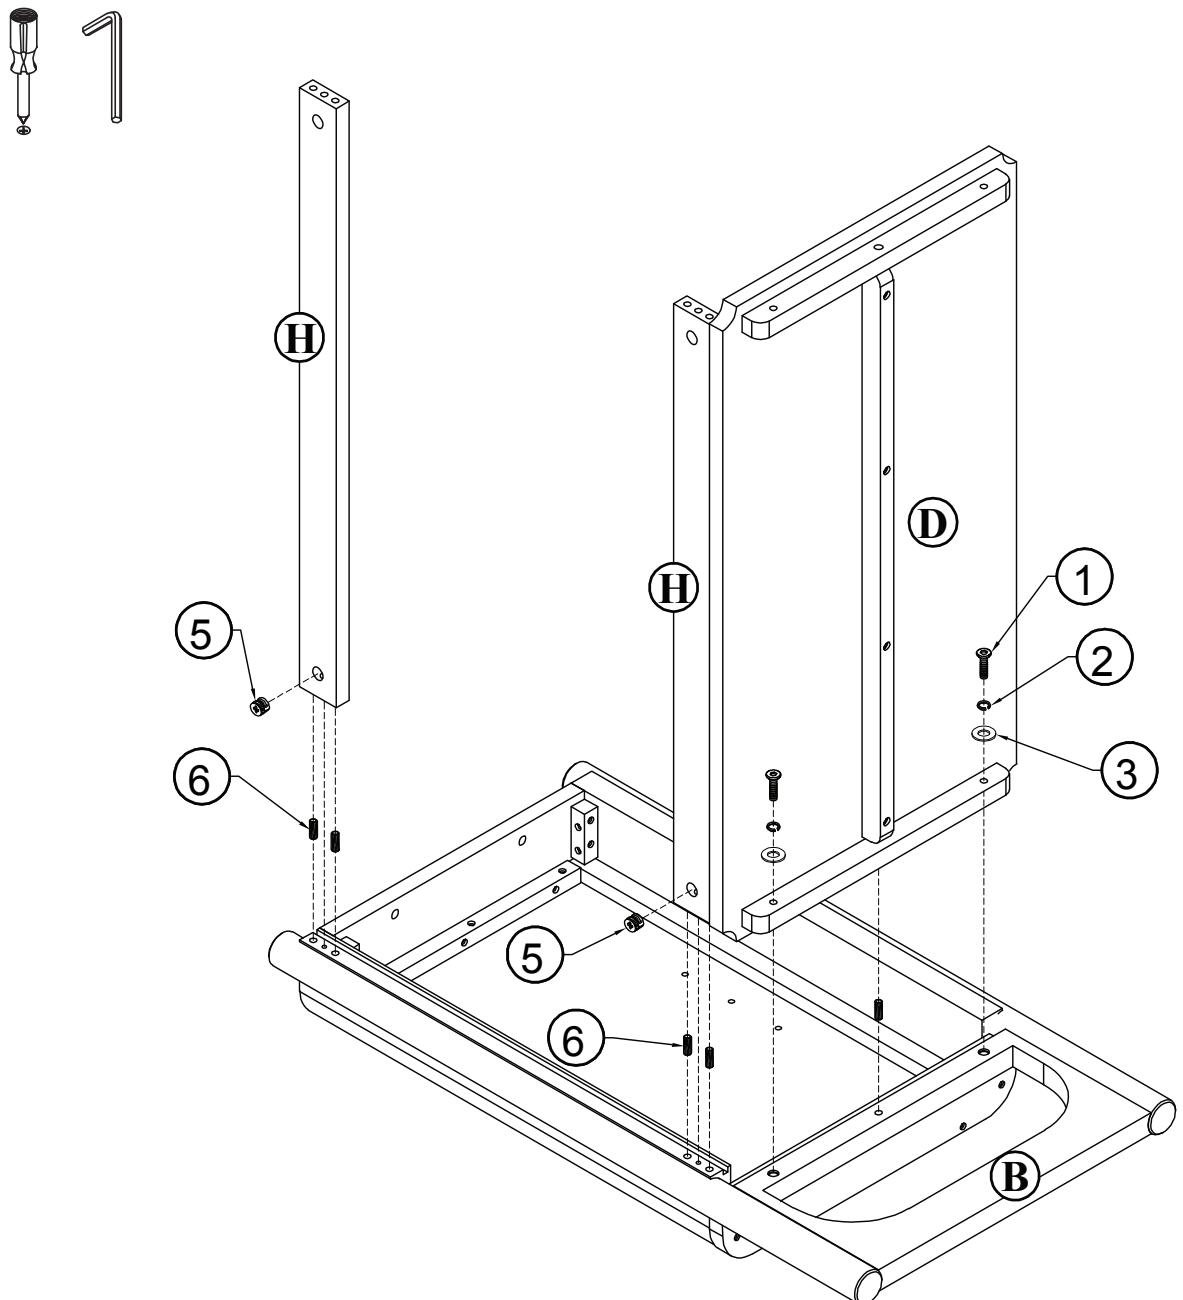


# Step 3

Attach the Left Side Frame (C) to the assembly using Cam Locks (5), M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3).

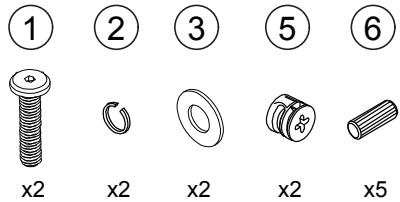


Insert Wooden Dowels (6) to ensure proper alignment and stability before tightening.

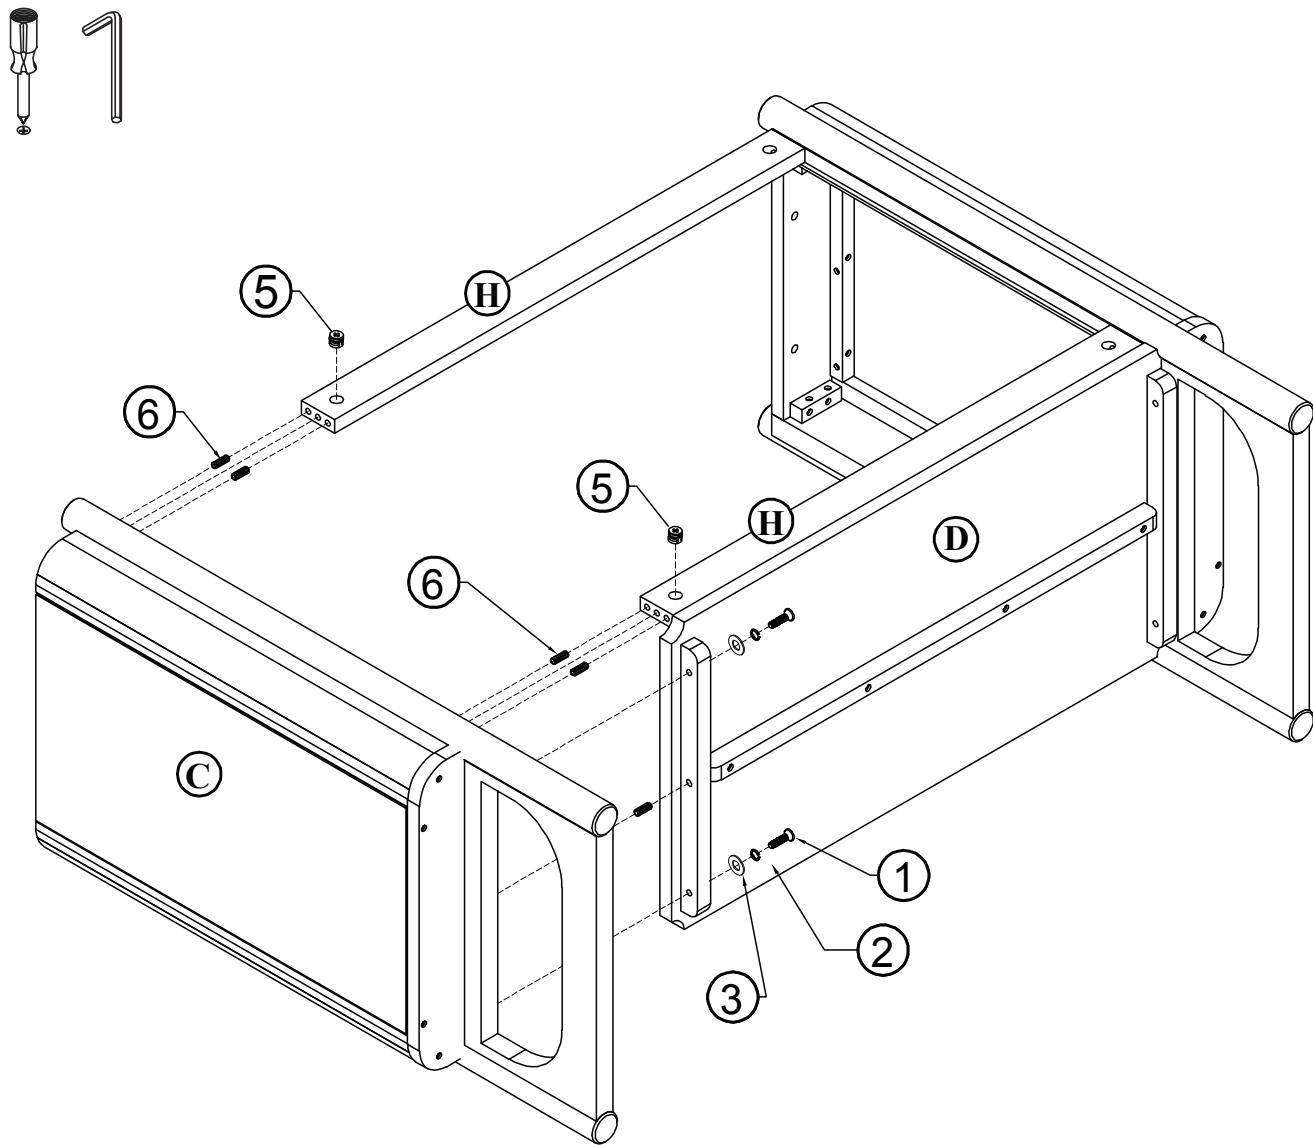




# Step 4

Slide the Back Panel (E) down into the grooves of the Left Side Frame (C) and Right Side Frame (B), ensuring it fits securely onto the Bottom Panel (D).

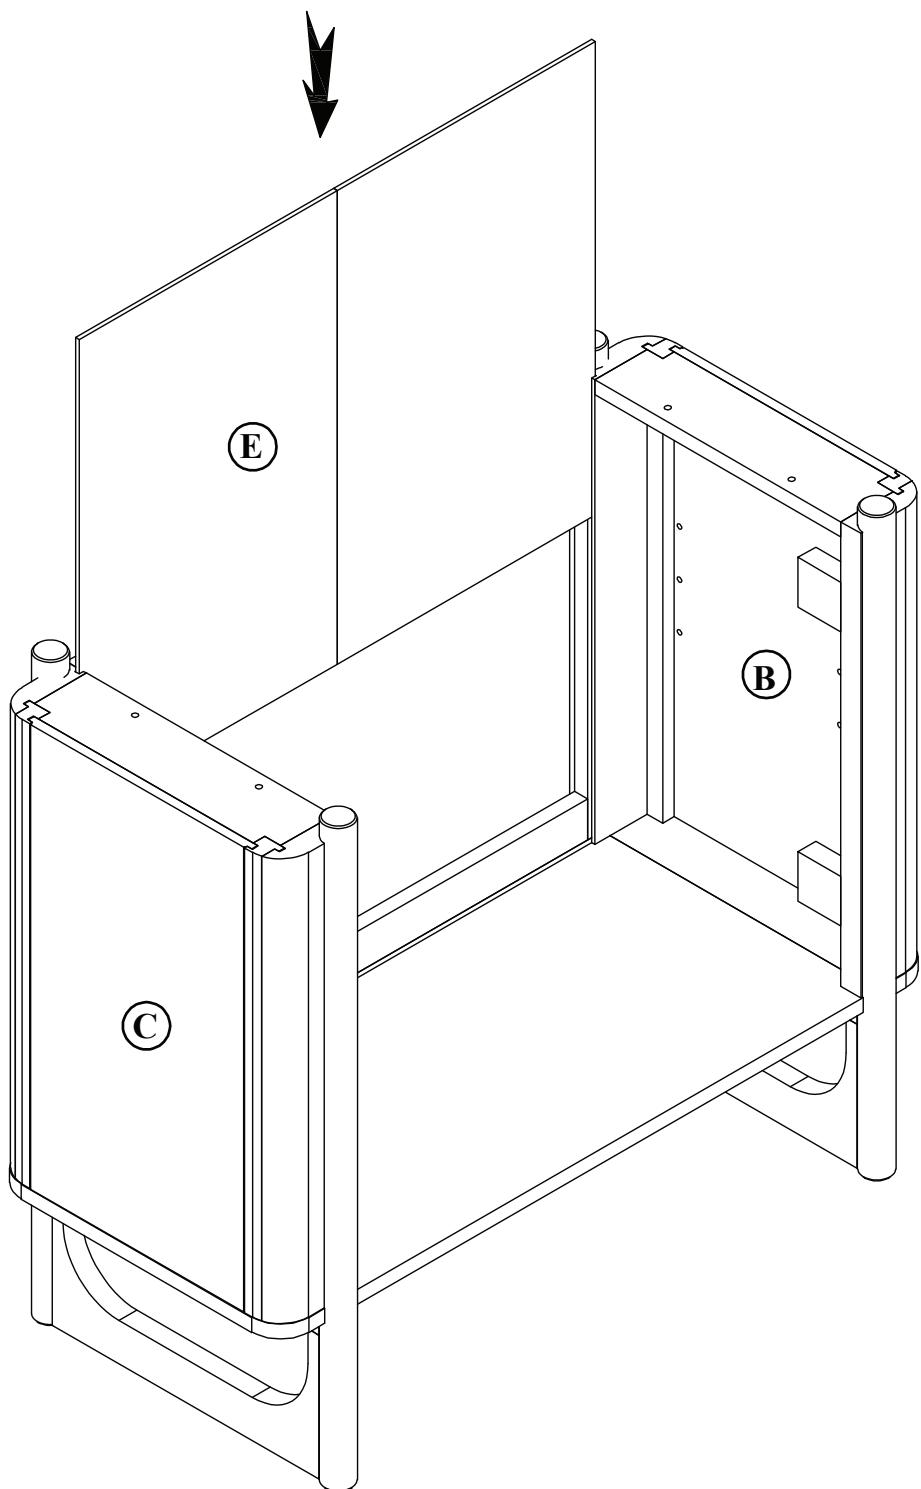


# Step 5


Place the Adjustable Shelf (I) from the top down and secure it using Shelf Pins (7) and M4x15mm Screws (8).

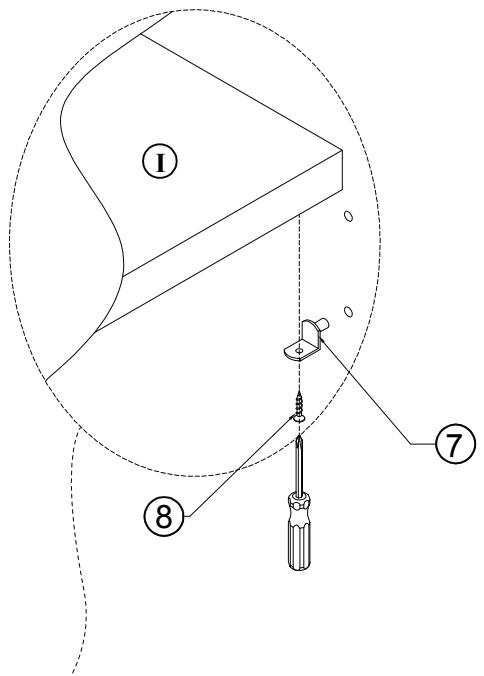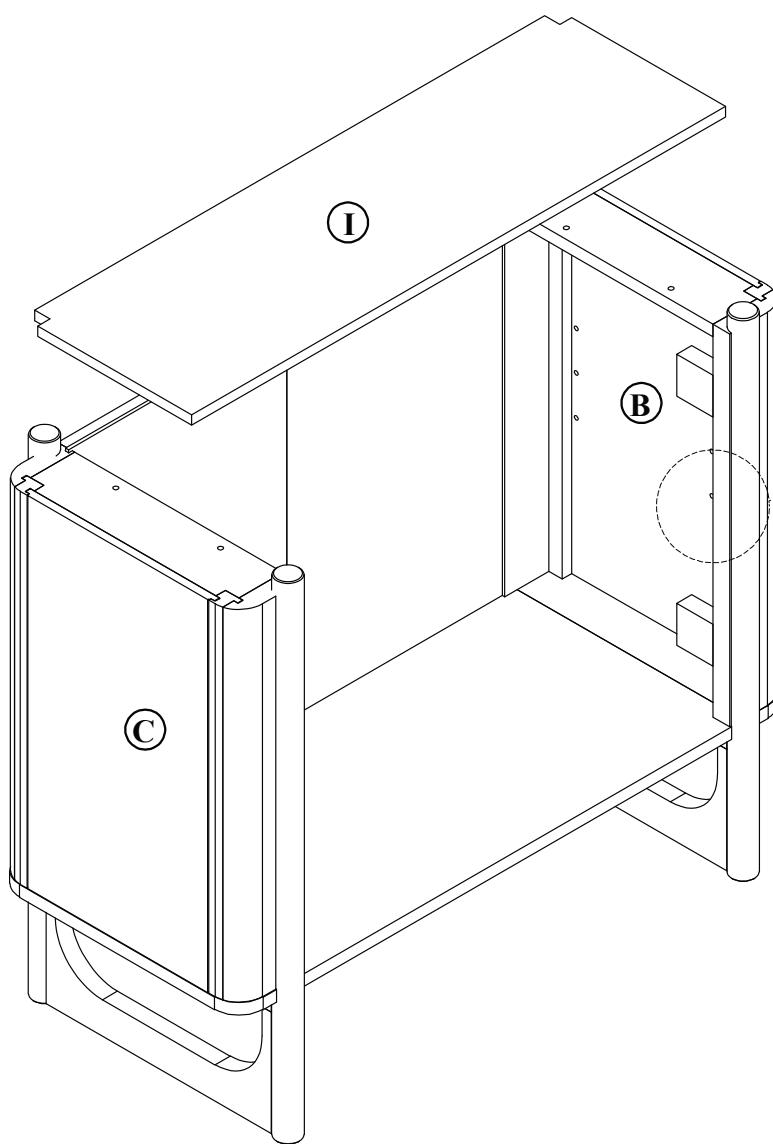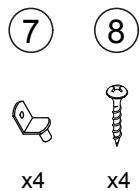

# Step 6



Attach the Magnetic Catch (13) to the Top Panel (A), using M4x15mm Screws (8).

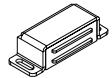(8)  x4  
(13)  x2

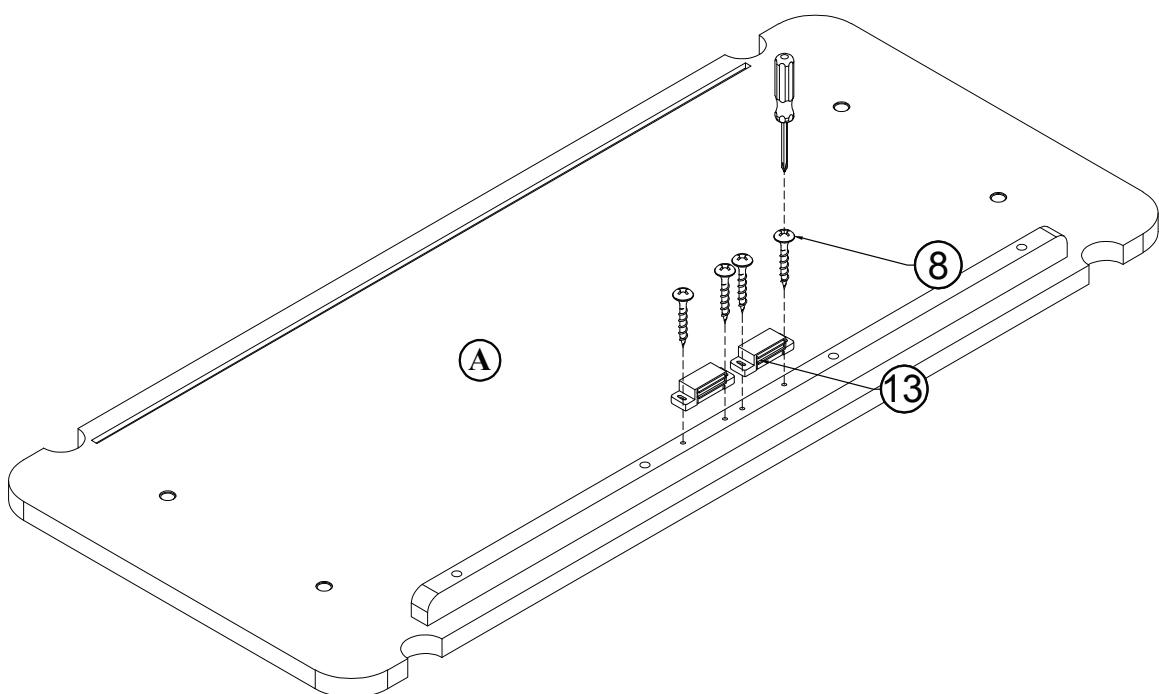



# Step 7

Place the Top Panel (A) on top of the cabinet assembly. Secure it in place using M6x35 Hex Button Head Bolts (1), M6 Lock Washers (2), and M6 Flat Washers (3). Tighten all bolts firmly to ensure the top is stable and properly aligned.

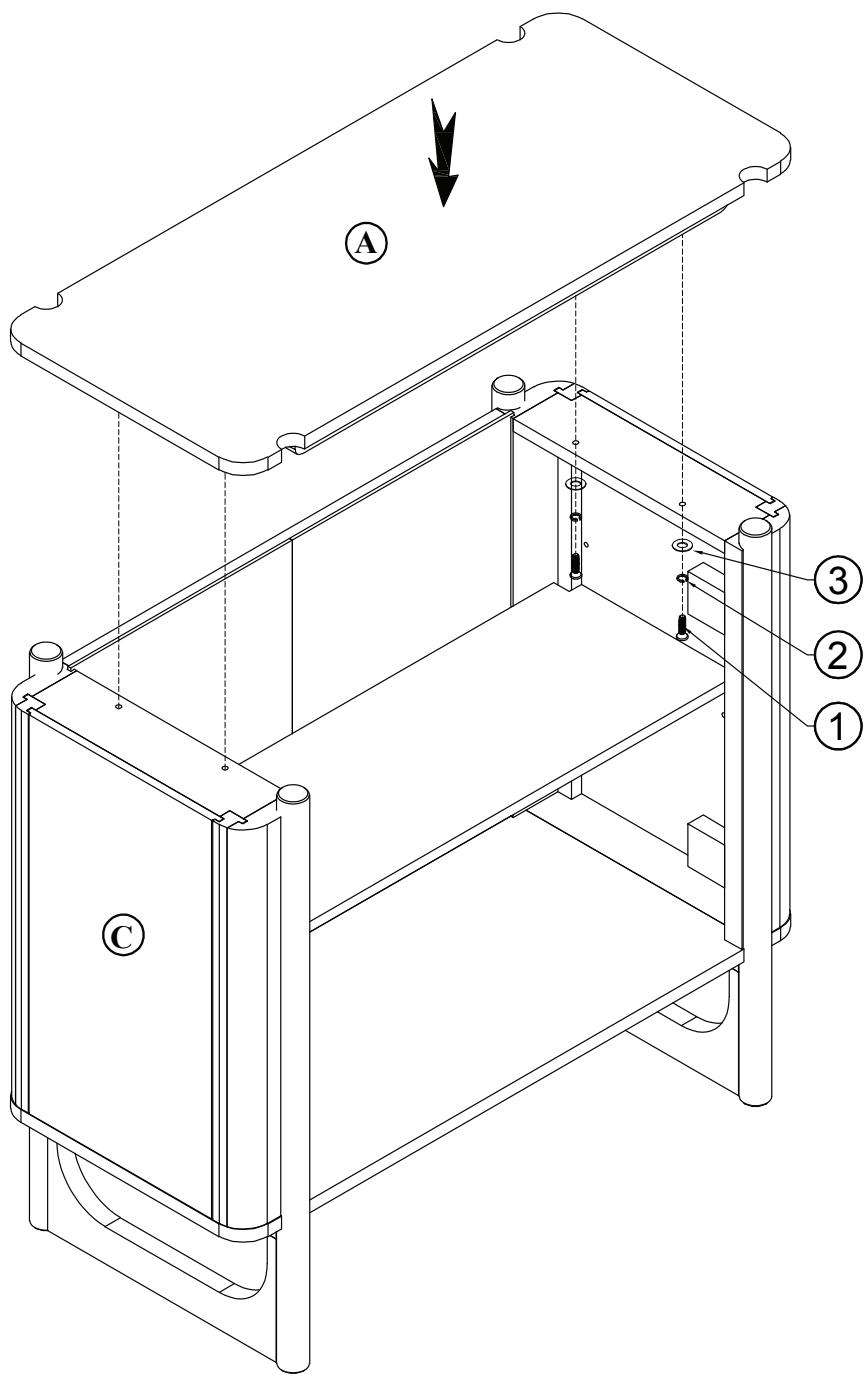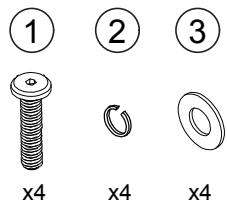



# Step 8

Install the Handles (20) on the Left Door (F) and Right Door (G) using M4x30mm Screws (9) and tighten securely. Then, attach the Hinges (10) to both doors using M3.5x15mm Screws (11). Ensure the hinges are properly aligned and fully tightened.

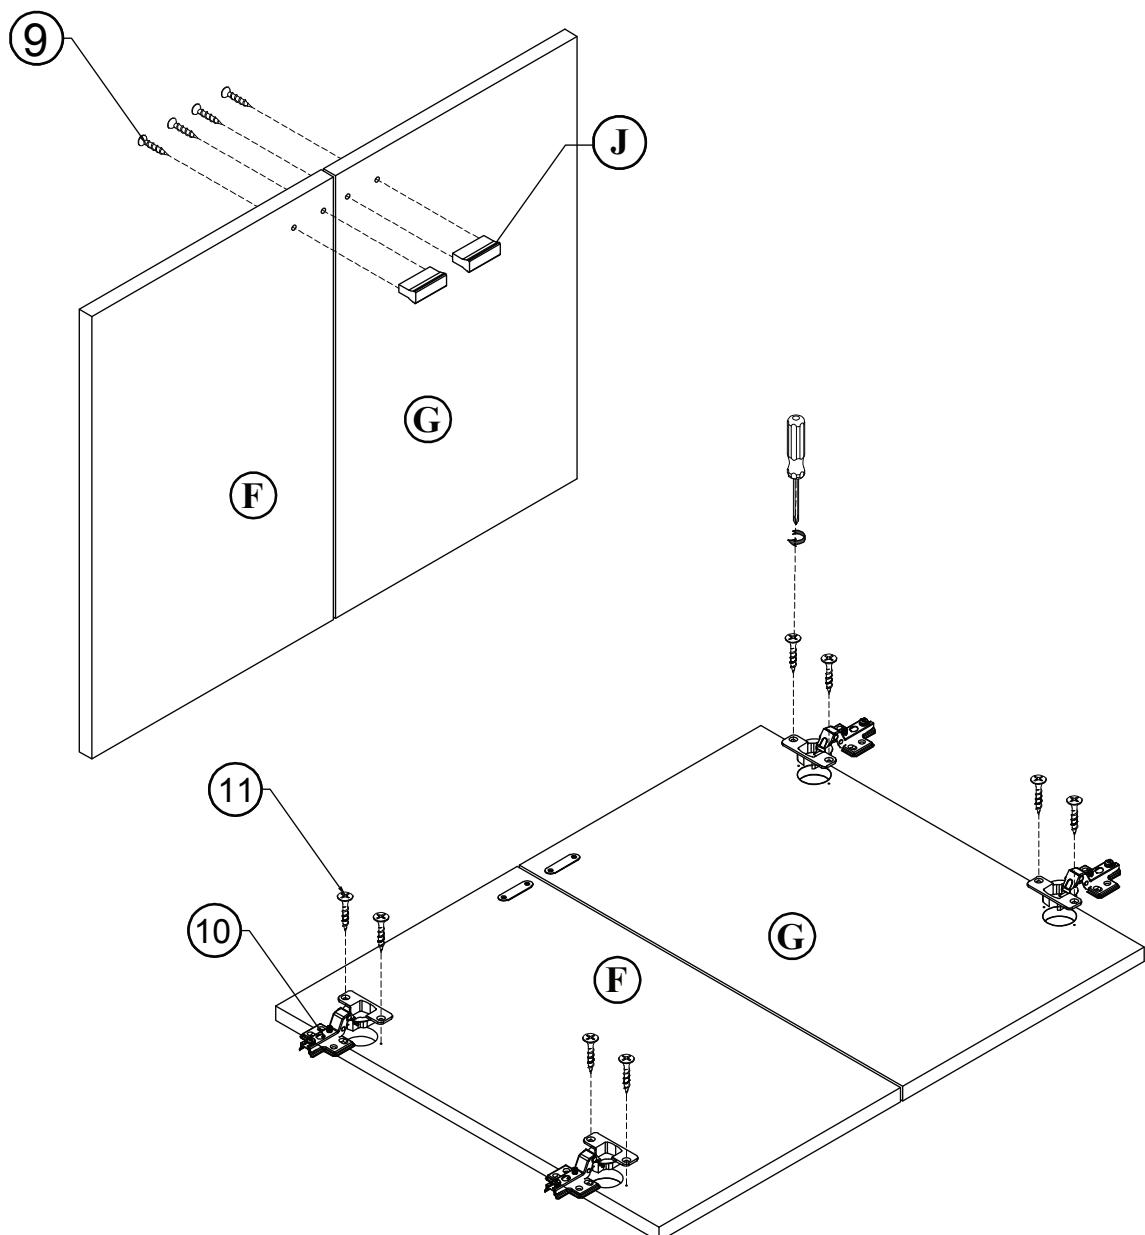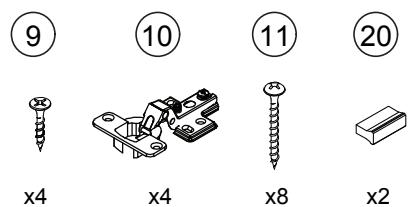

# Step 9


Attach the Left Door (F) and Right Door (G) to the cabinet assembly using M3.5x15mm Screws (11).

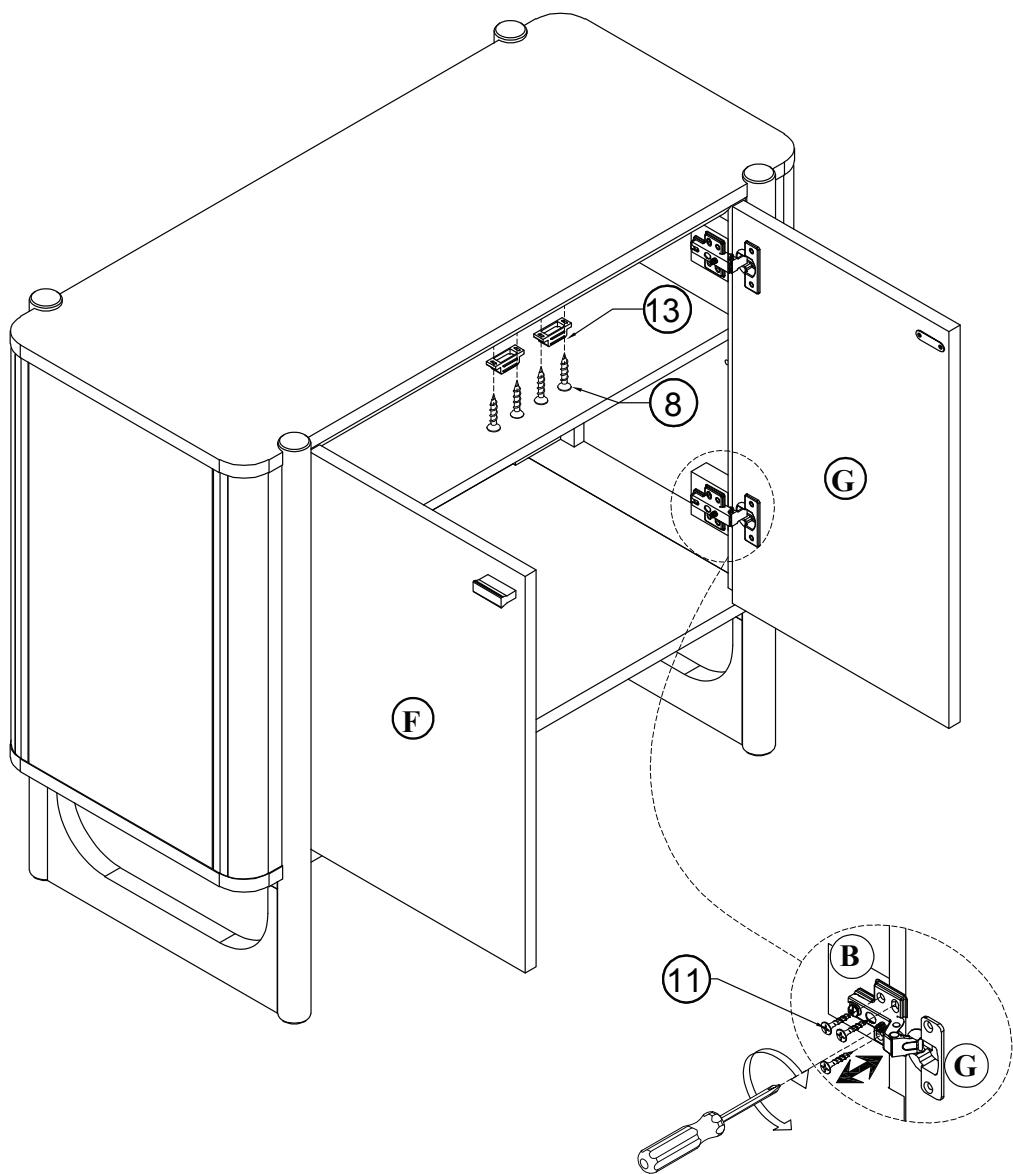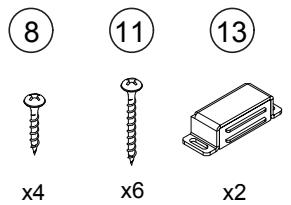


# Is your cabinet door looking crooked or unevenly spaced?

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet & doors. Follow the illustrations below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.


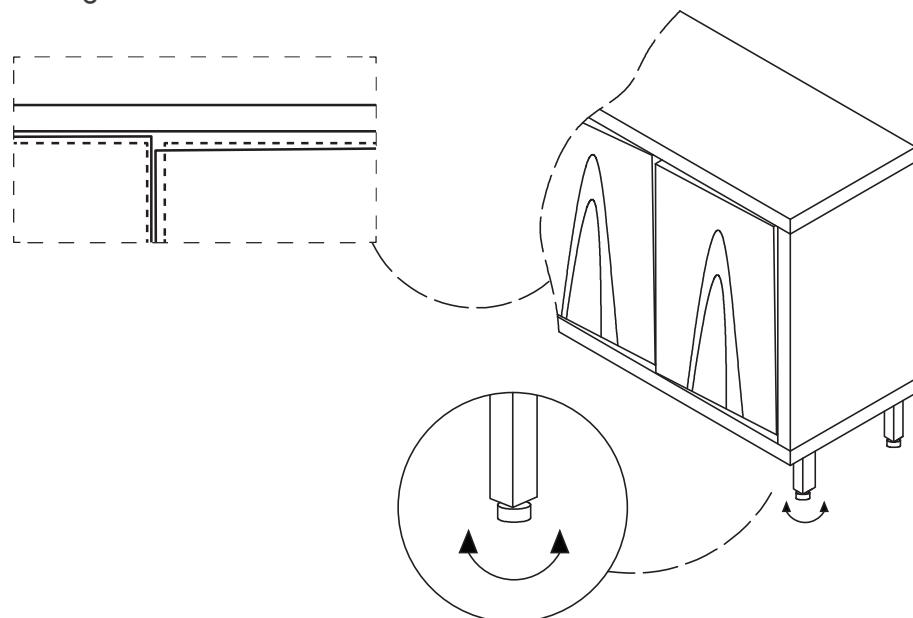


If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

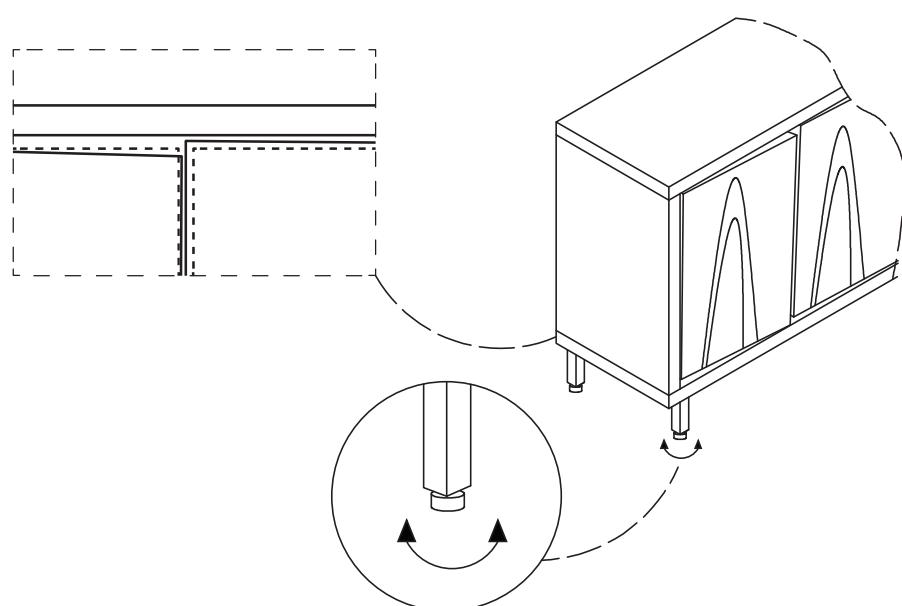

# Step 10

Safety first! Install the Tipping Restraint (15) to secure the cabinet to the wall. Attach the Mounting Brackets (14) using Longer Screws M4x40mm (16). Use Wall Plugs (18) and Screws (17) to anchor the brackets firmly into the wall. Make sure the strap is tight and the cabinet is stable to prevent tipping.

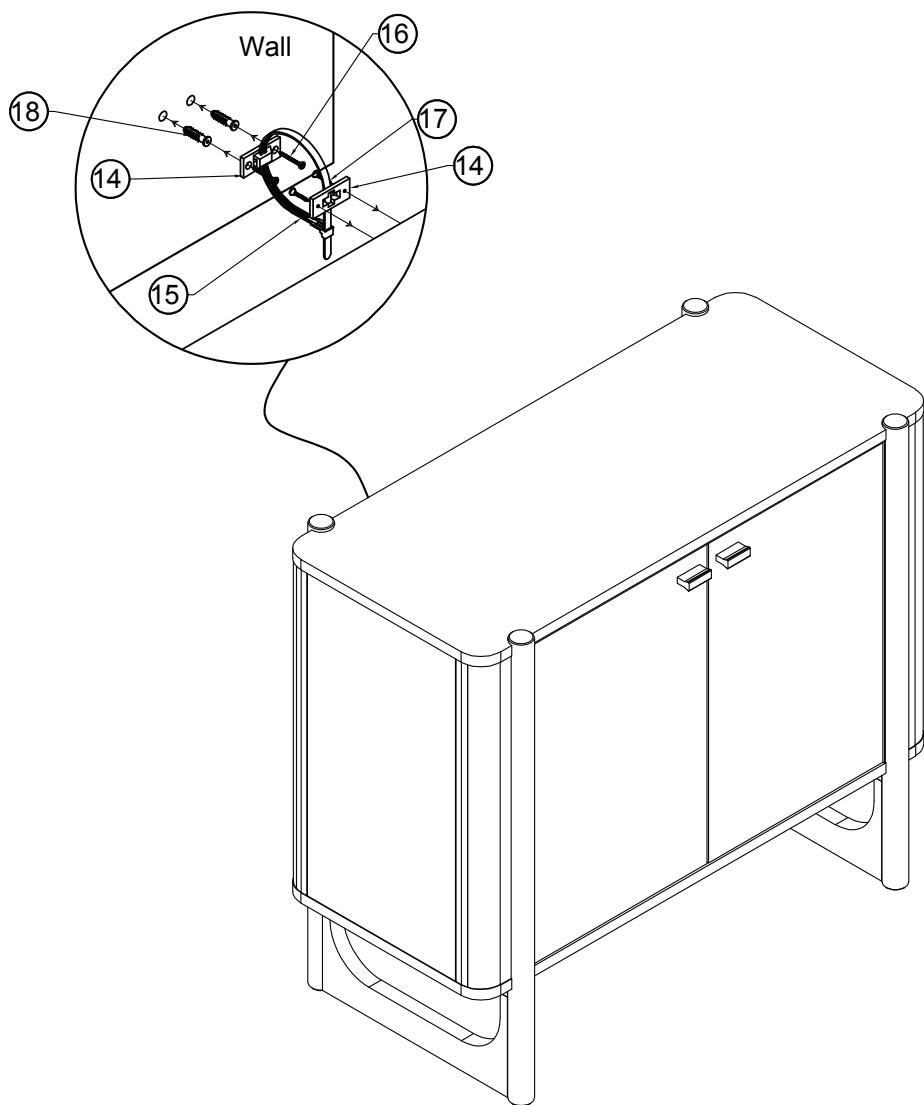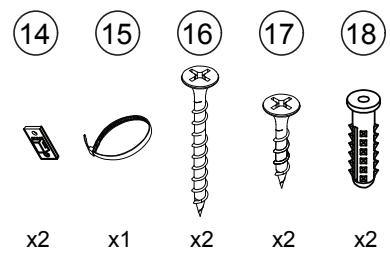

## IMPORTANT NOTE:

Young children (and/or pets) can be seriously injured by tipping furniture units.


You must install the provided anti-tip kit hardware solution, as instructed, to prevent the furniture unit(s) from tipping over - which could possibly lead to injuries or damage.

The provided anti-tip kit hardware solution is intended only as an additional safety measure & deterrent; it is not a substitute for proper adult supervision.

The provided anti-tip kit hardware solution is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased & installed separately.

# All Set for Everyday Use

**Weight Limitation**  
 **TOTAL 90 lbs**

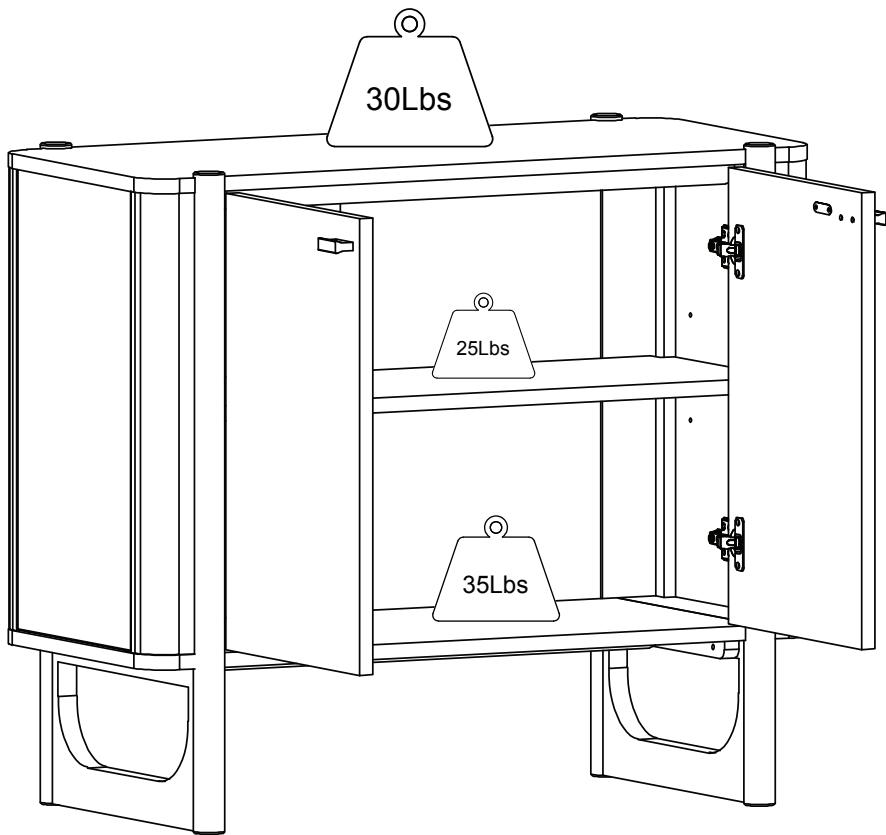

## Important usage guidelines

- DO NOT** - Modify the structure of this product
- DO NOT** - Use for commercial purposes
- DO NOT** - Leave spilled liquids on the cabinet
- DO NOT** - Use the cabinet if it is damaged
- DO NOT** - Perform temporary repairs
- DO NOT** - Use outdoors