





Assembly Instructions

Solid Wood Wall Shelves

SKU 600200 / 600202 / 600230 / 600232

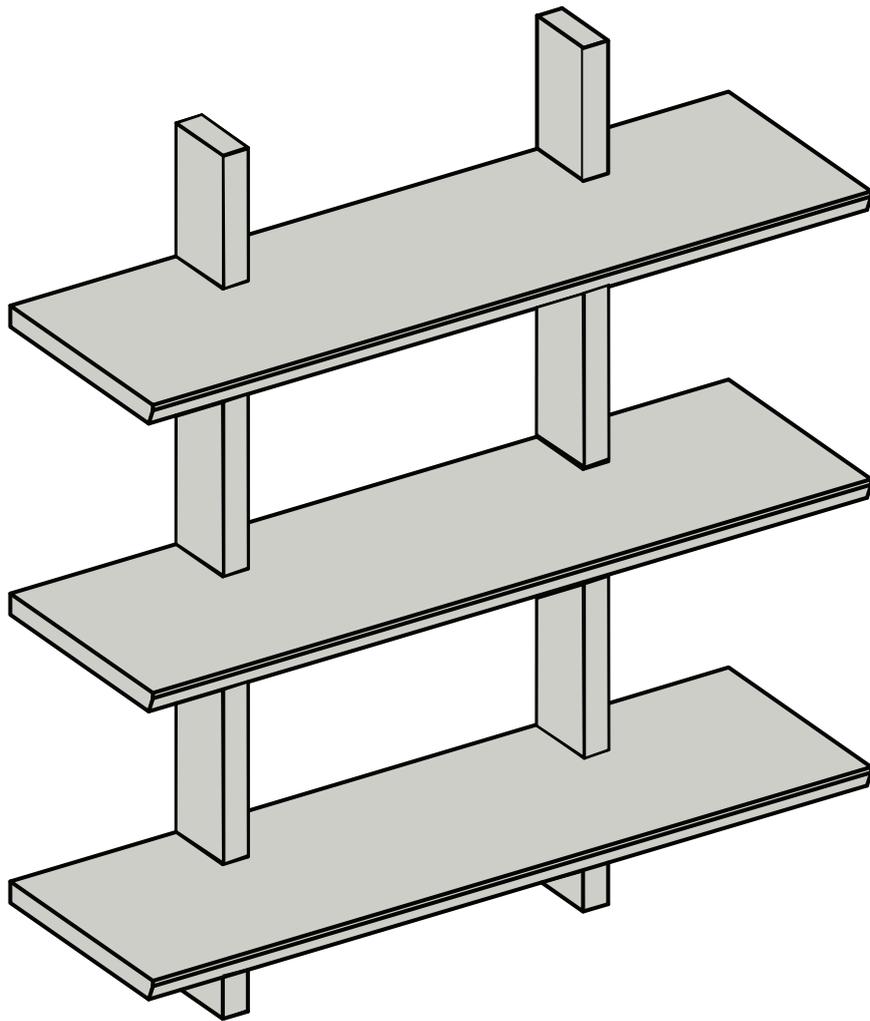

The Parts

	Description	Qty	
A	Shelf	3	
B	Support Bar	2	
1	1 / 4 x 2 inch Hex Button Head Bolt	6 + 1 Extra	
2	1 / 4 inch Flat Washer	6 + 1 Extra	
3	M4*50mm Screw	2 + 1 Extra	
4	Non-Drywall Wall Anchor	2 + 1 Extra	
5	Drywall Wall Anchor	2 + 1 Extra	
6	Allen Key	1	
7	Drilling Jig	1	

- **Estimated time for assembly**

≥ 15 minute


- **What you need**

- 5/16" Drill Bit
- Phillipips head screwdriver

- **Use the packaging carton as a working surface to prevent scratches or damage during assembly.**

The product

Exploded View


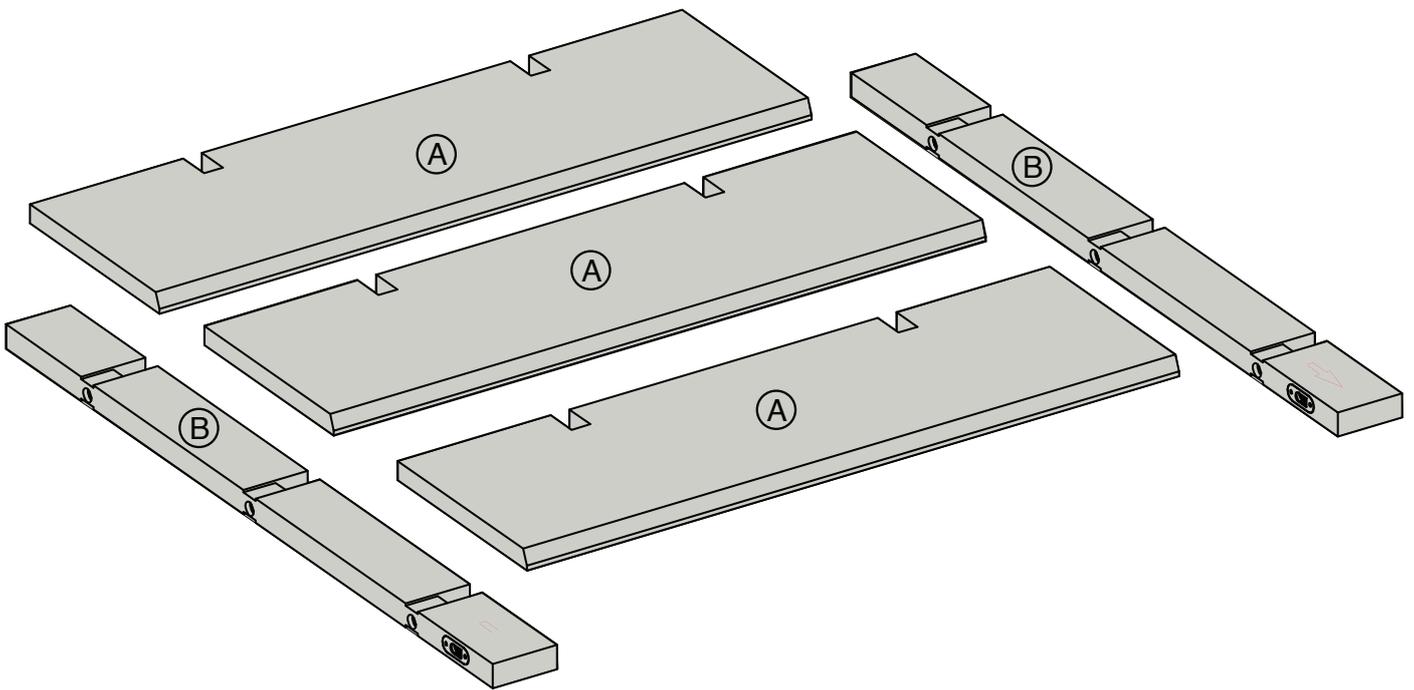


IMPORTANT

- Do not tighten bolts / screws completely until all bolts / screws are line up and inserted into holes
- Do not over tighten bolts to avoid stripping.
- Please use hand tools to assemble this product.

Shelf Orientation Options

The shelves can be installed in two different orientations, depending on your preferred look. You may position the angled edge facing left or right, as shown in the illustrations..


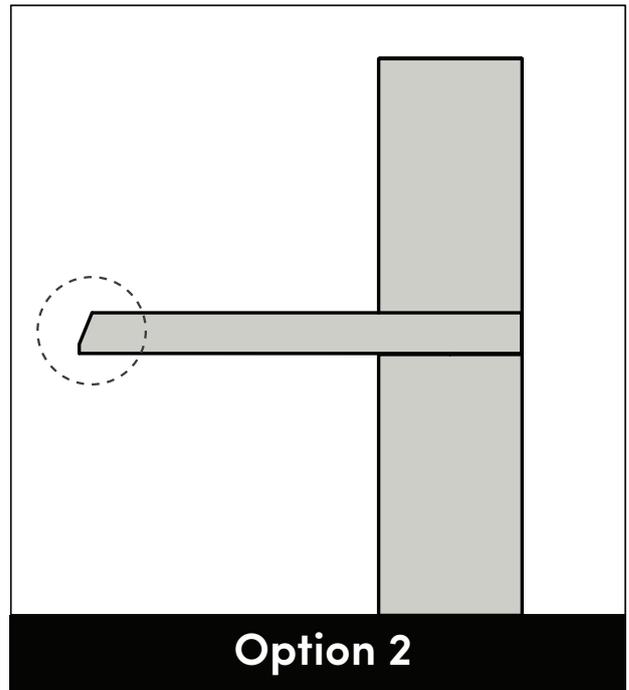
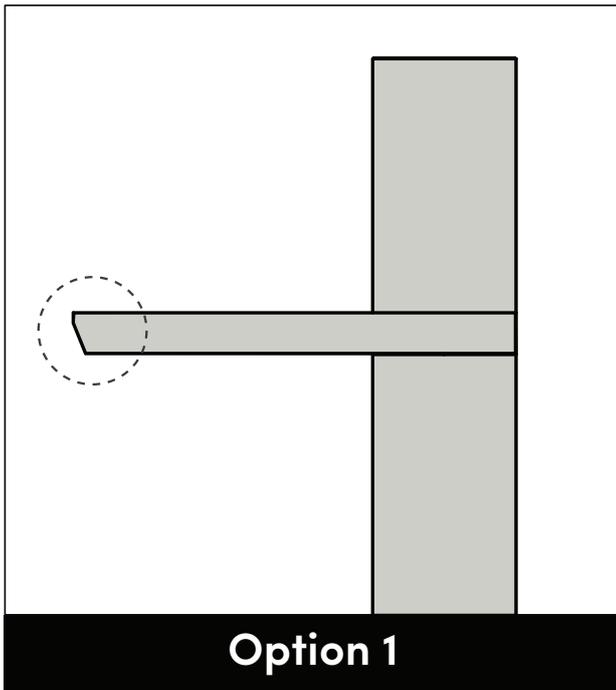


NOTE:

Both orientations are correct and will not affect the stability or function of the bookcase. Choose the direction that best fits your desired style

Step 1


Insert each Shelf Board (A) straight down into the slots on the Support Bars (B).

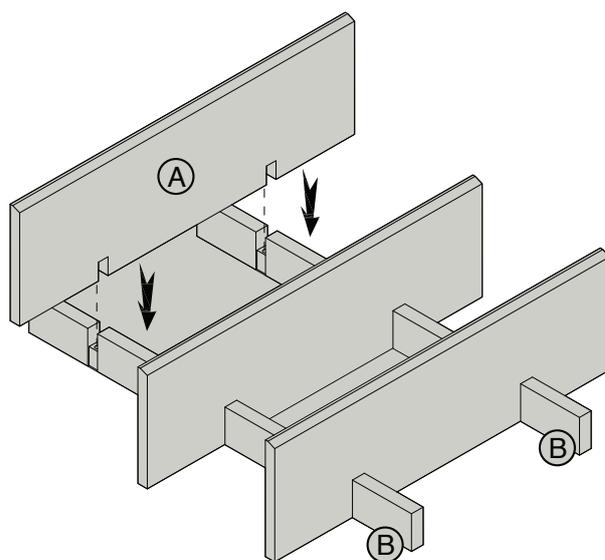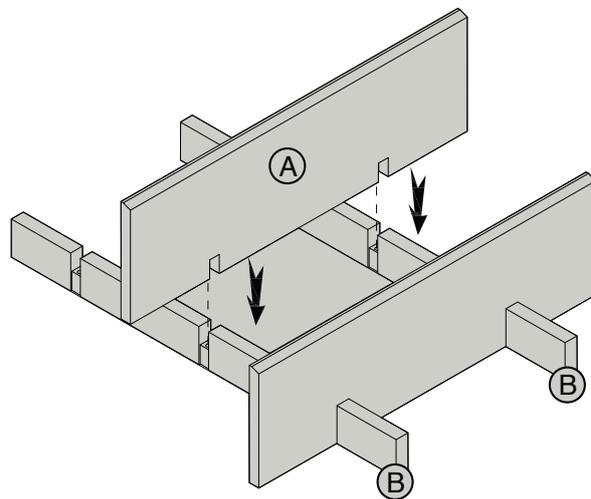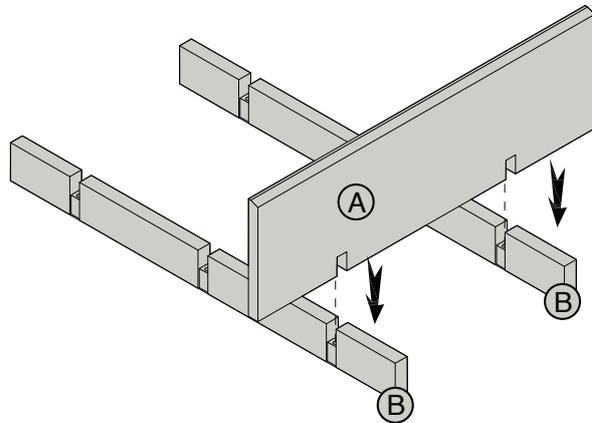

Step 2


Secure each connection using Hex Button Head Bolts (1) and Flat Washers (2).

Tighten using the provided Allen Key (6).

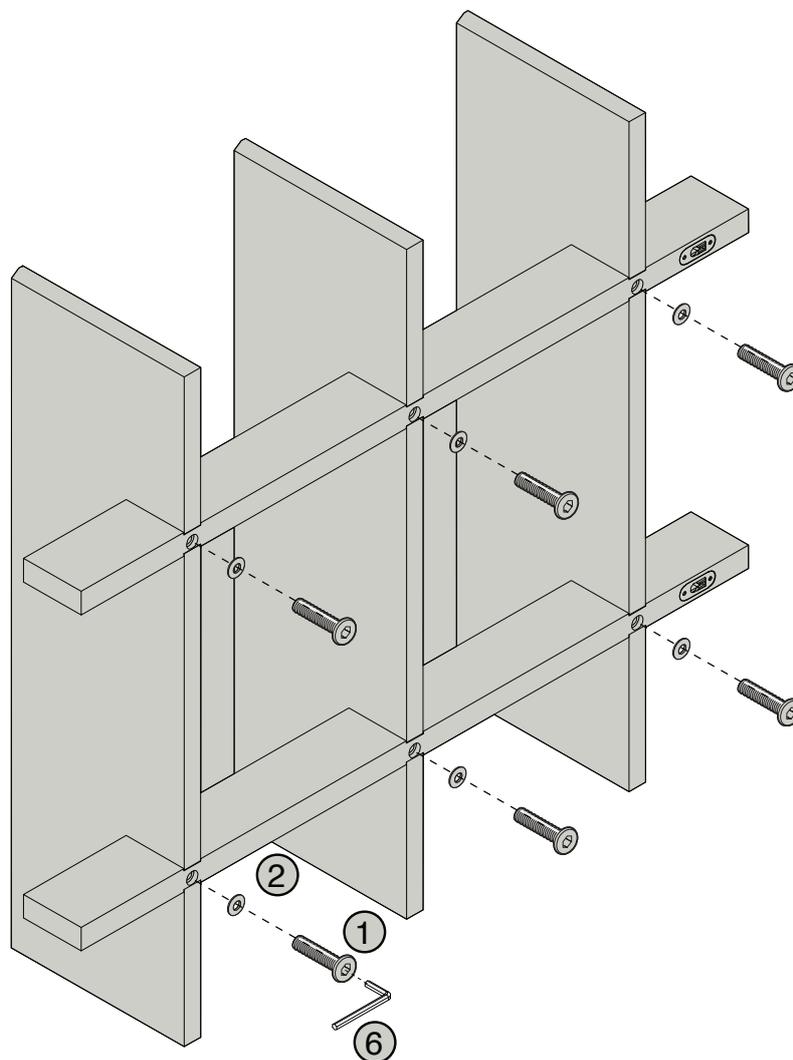


Step 3


Choose your desired shelf location on the wall. Using the Wall Anchor Spacing Dimensions graphic below, line up and mark the spots where you will need to drill holes for the Wall Anchors (4) (5).

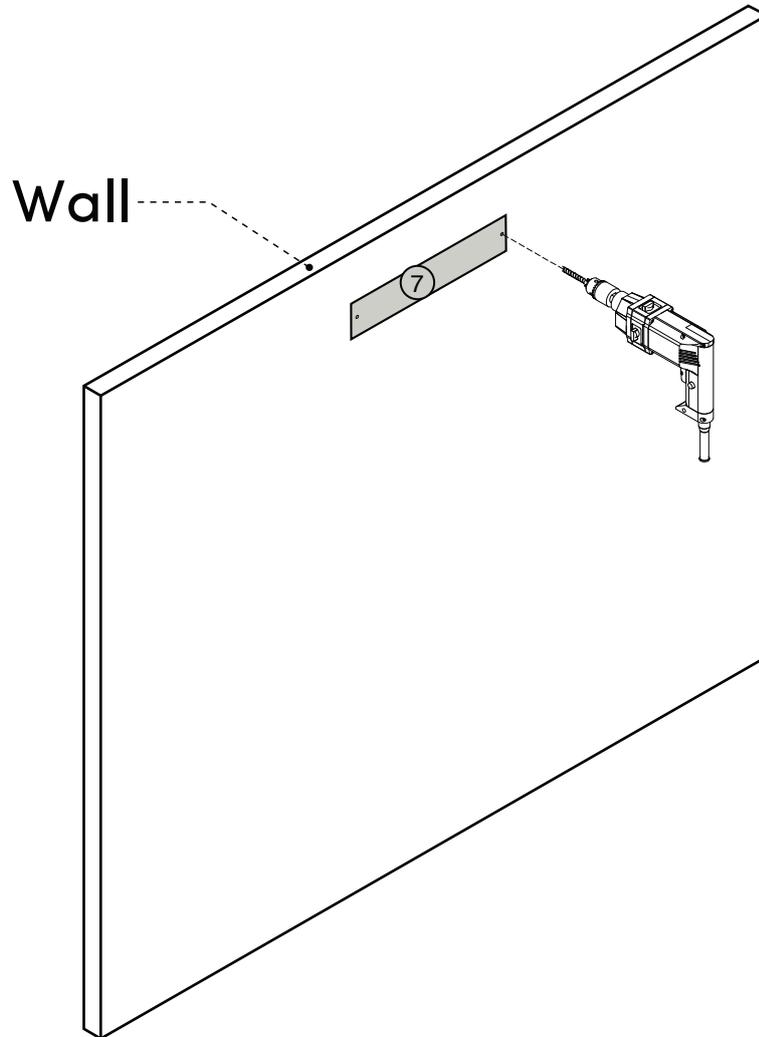


Wall Anchor Spacing Dimensions:

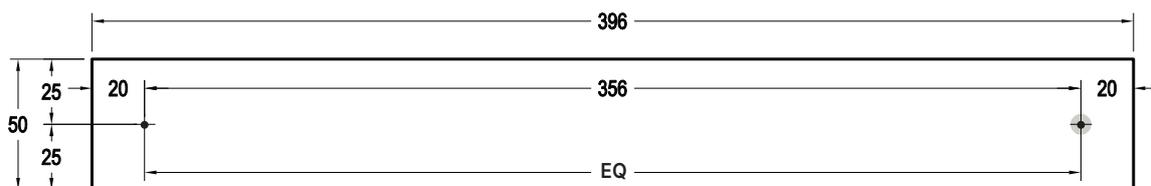


How to insert Drywall Anchor

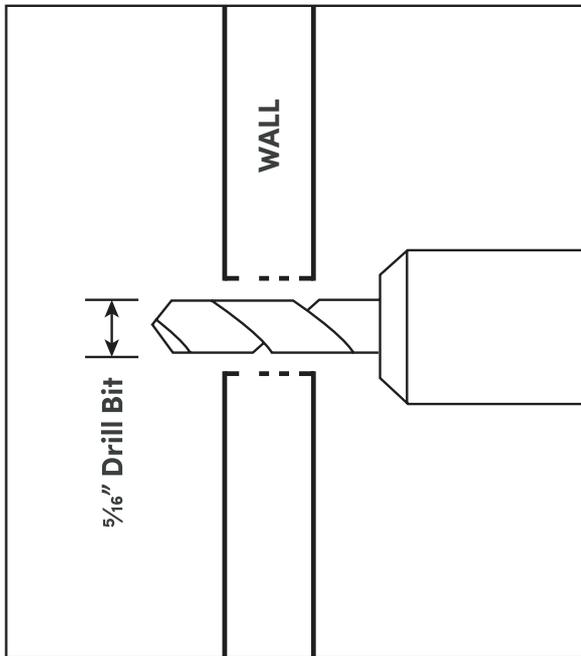


1. Drill hole with 5/16" bit.

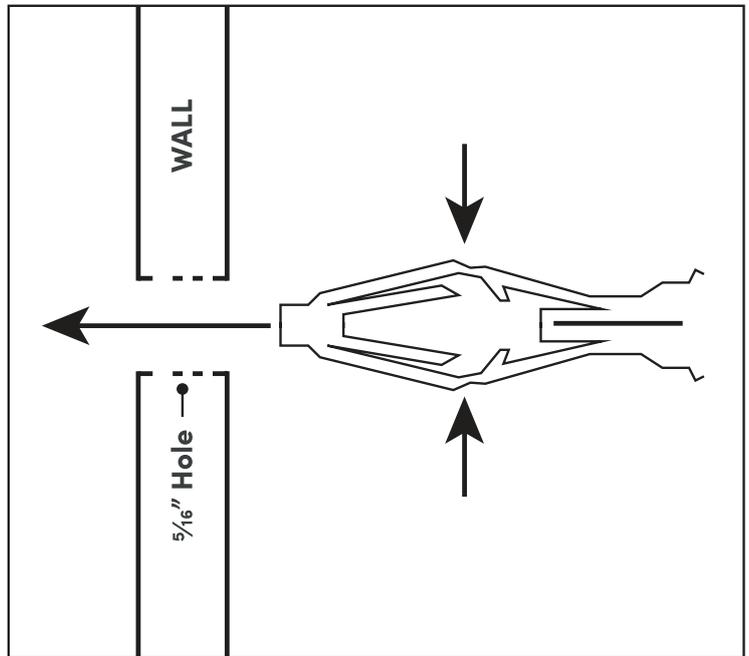

2. Pinch and insert.

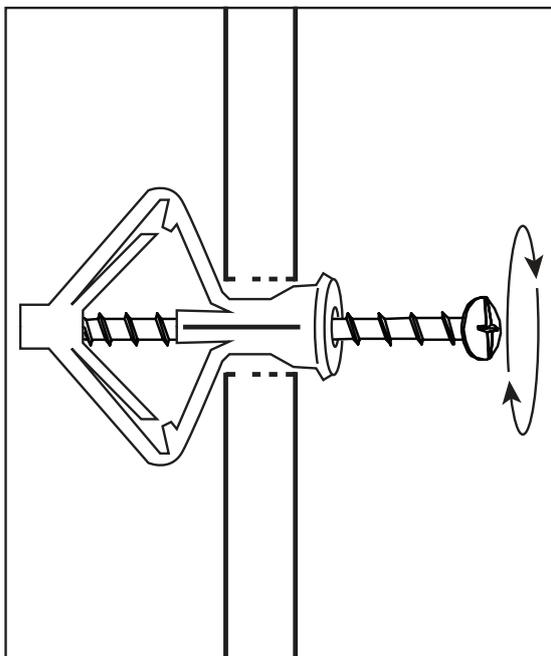

3. Begin tightening.

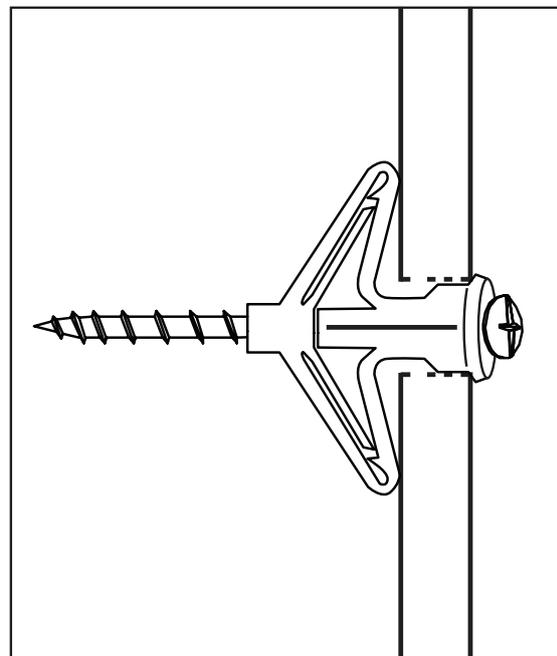



4. Anchor is secure when screw is tightened to 100%

Step 4

Using a 5/16" drill bit, drill holes on your marks then push the Wall Anchors (4) (5), for the proper wall type, into the holes.

Finally, fasten a M4*50mm Screw (3) into each of the top holes, while leaving a small gap (8mm - between the back of the screw and wall to allow for the unit to hang on).

(Do NOT fasten a screw into the bottom hole yet).

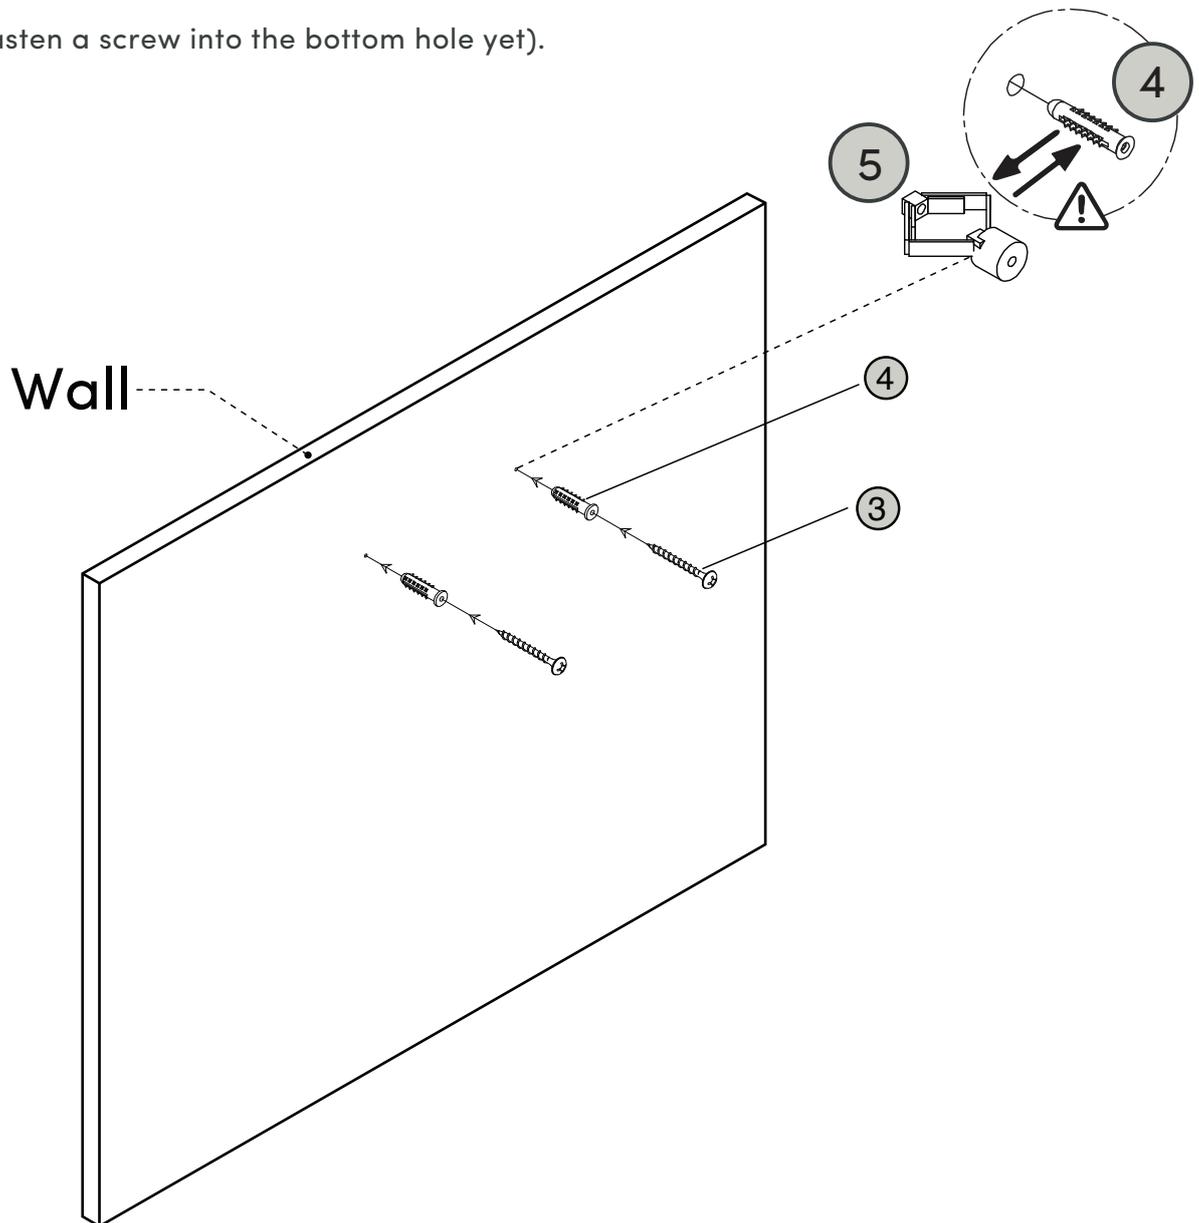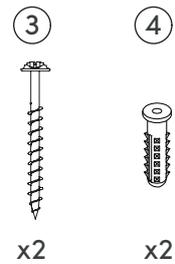


IMPORTANT NOTE

- Part 4 is for non-drywall applications
- Part 5 is for drywall applications.


Step 5

Finally, lift the assembled shelf unit and bring it toward the wall. Align the top keyhole brackets on the back of the Support Bar (B) with the top screws installed in the Wall Anchors (4) (5).


Slowly lower the shelf unit onto the top screws, ensuring it is securely seated and properly supported before releasing your hold.

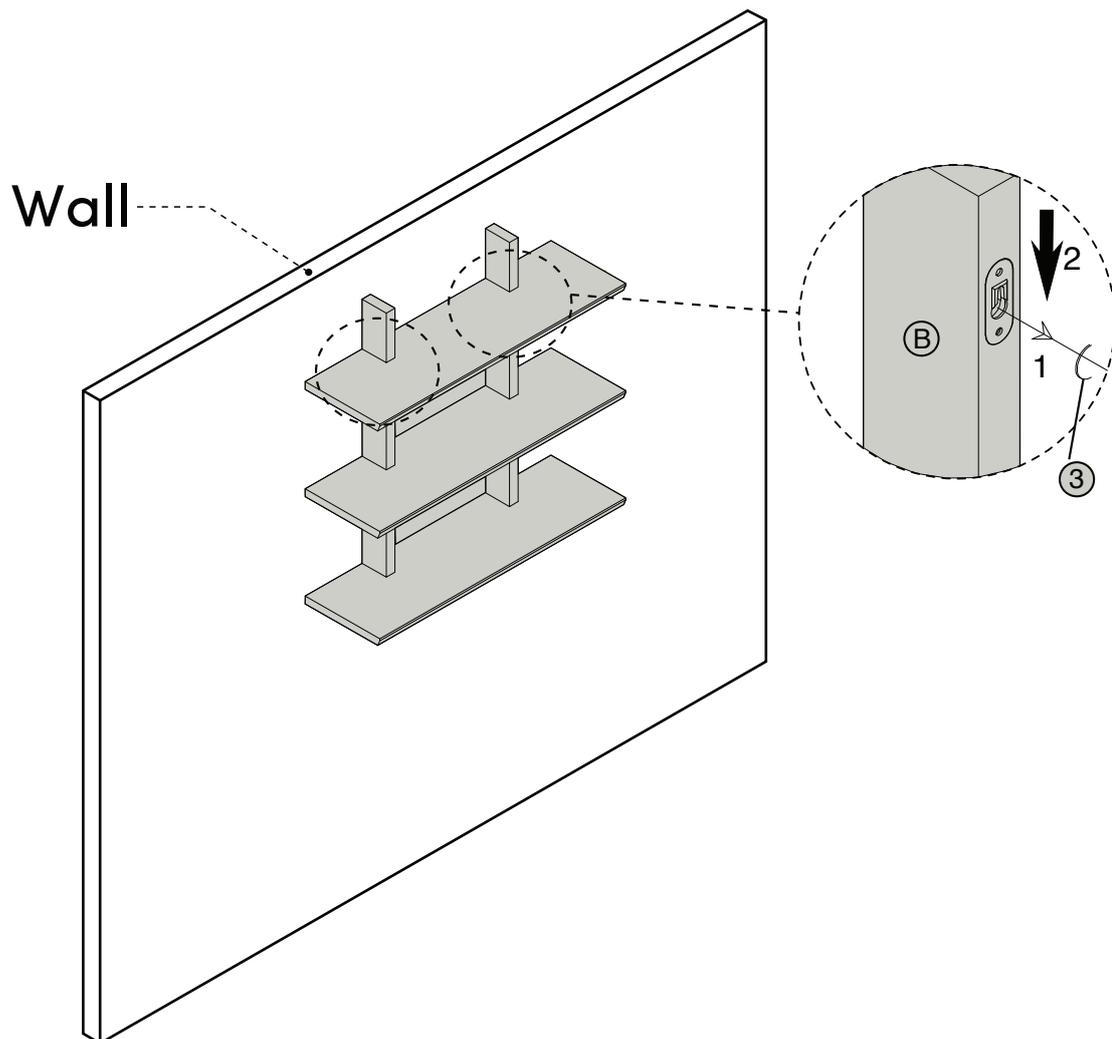

Combination

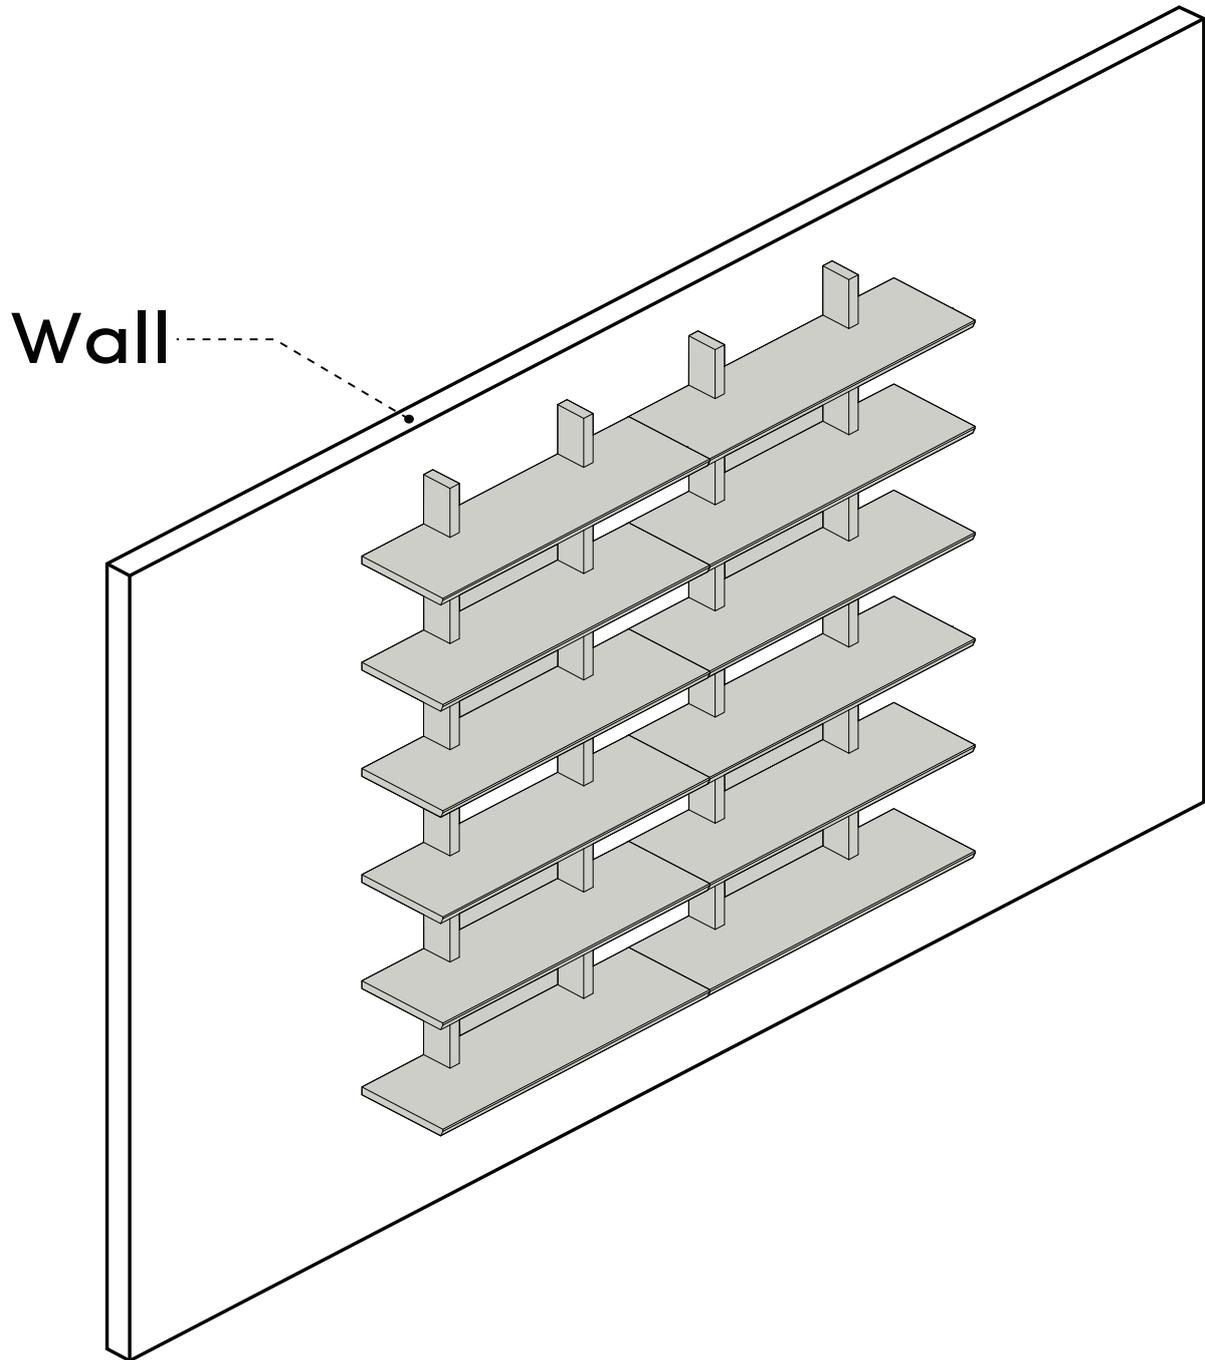

All Set for Everyday Use

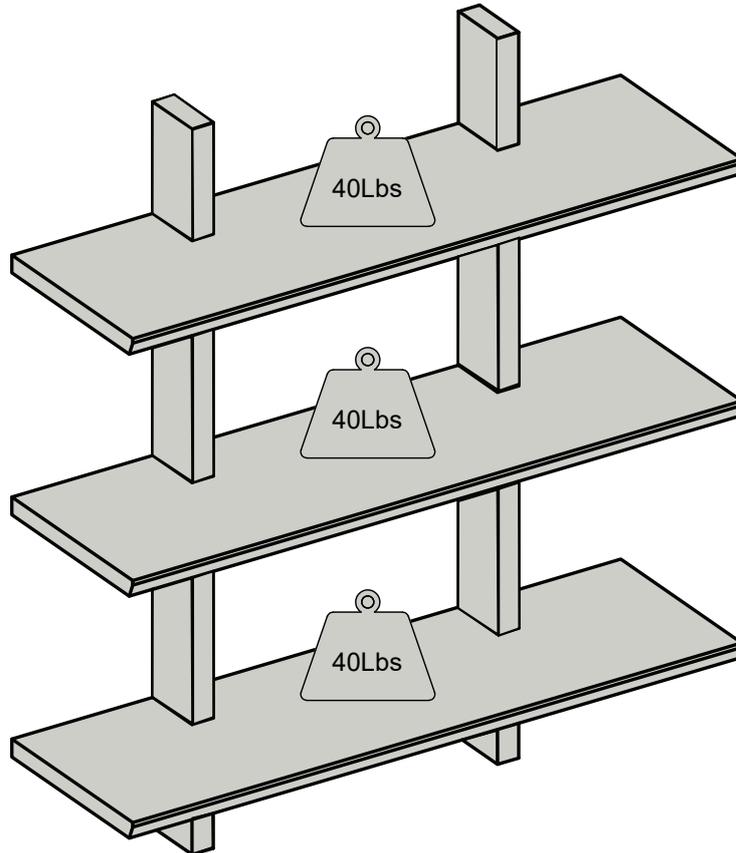

Important usage guidelines

- DO NOT - Modify the structure of this product
- DO NOT - Use for commercial purposes
- DO NOT - Leave spilled liquids on the product
- DO NOT - Use the product if it is damaged
- DO NOT - Perform temporary repairs
- DO NOT - Use outdoors

The Return

Stress-free returns when we take care of it

Feel free to call us at

1-888-909-5546

or send us a message at

help@allforwood.com.

We'll provide you with a hassle-free replacement at no cost.

Replacement



Give us a call or email



Replacement



You

Return



Re-package item



Schedule pick up



Track package



Replacement



You

We really want to save you the trouble of re-packaging and returning your item, because let's be honest, no one has time for that.

Warranty

This product includes a specific warranty period starting from the purchase date.
To register your product, simply scan the QR code with your phone

Scan me!

For Warranty

