











Let's Assemble

Thor Bed Frame

SKU 901000 / 901010 / 901020 / 901100 / 901110 / 901120 / 901200 / 901210 / 901220

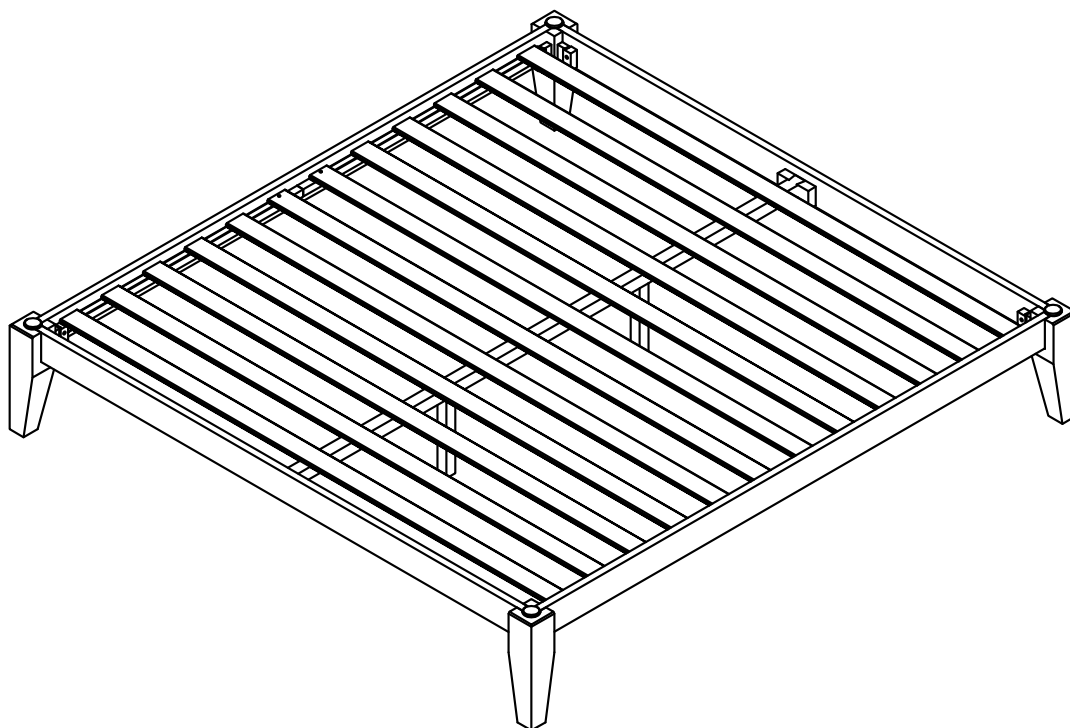

The parts

| Description | Qty | |
|------------------------|-------------|---|
| A Legs | 4 |  |
| B End Rails | 2 |  |
| C Side Rails | 2 |  |
| D Support Rail | 1 |  |
| E Support Legs | 2 |  |
| F Slats-6 pcs | 2 |  |
| 1 Wooden wedges | 8 + 4 Extra |  |
| 2 Wood Dowel Ø8 X 30mm | 4 + 2 Extra |  |
| 3 Foot Pads | 2 Extra |  |

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly

Estimated time for assembly

20 minute

Do not use power tools



Weight Limitation




Need Help?

Toll-free at 1-888-909-5546
Help@allforwood.com

The product

Exploded View

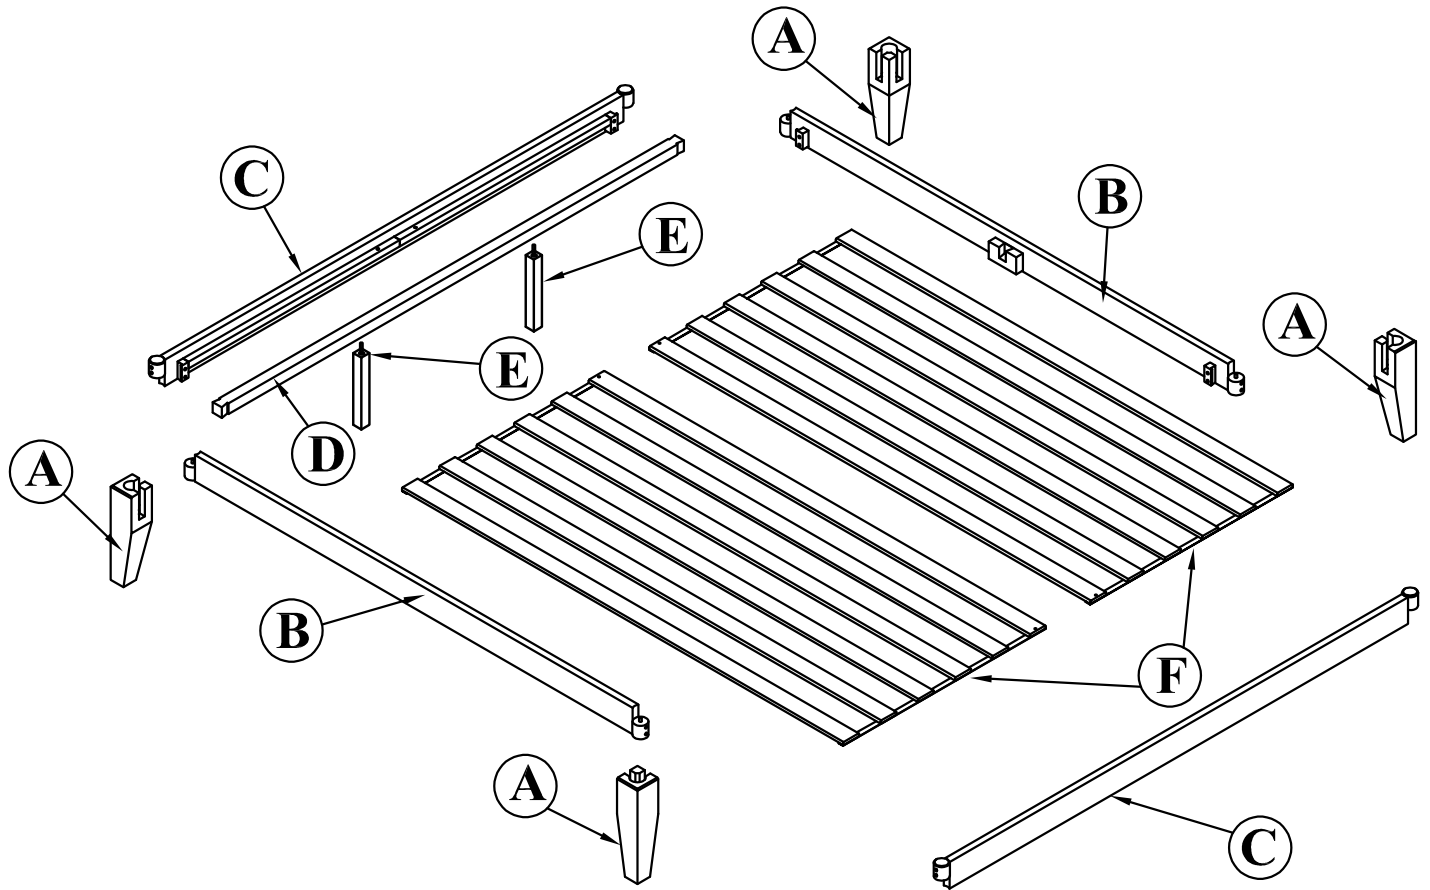


IMPORTANT

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


Step 1

Place the bed frame components where you plan to position the bed.
Insert the End Rail (B) completely into the Legs (A).

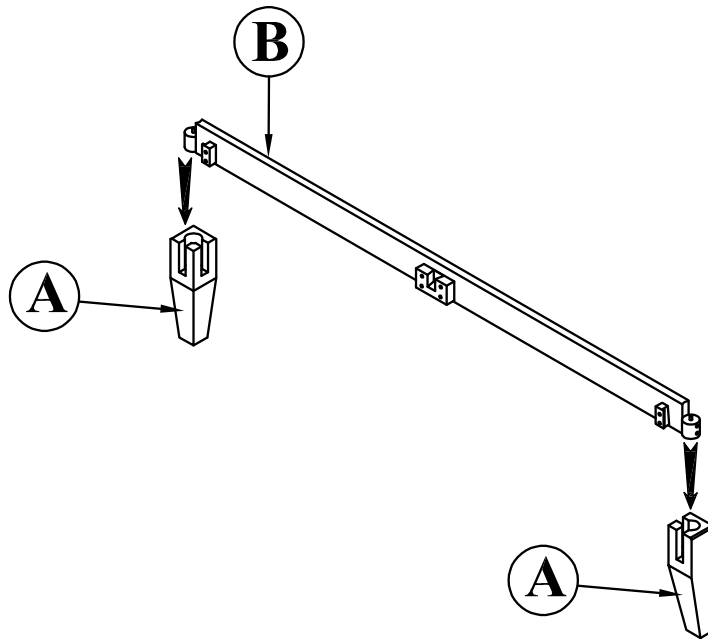


Step 2

Insert the Side Rail (C) completely into the Leg (A)

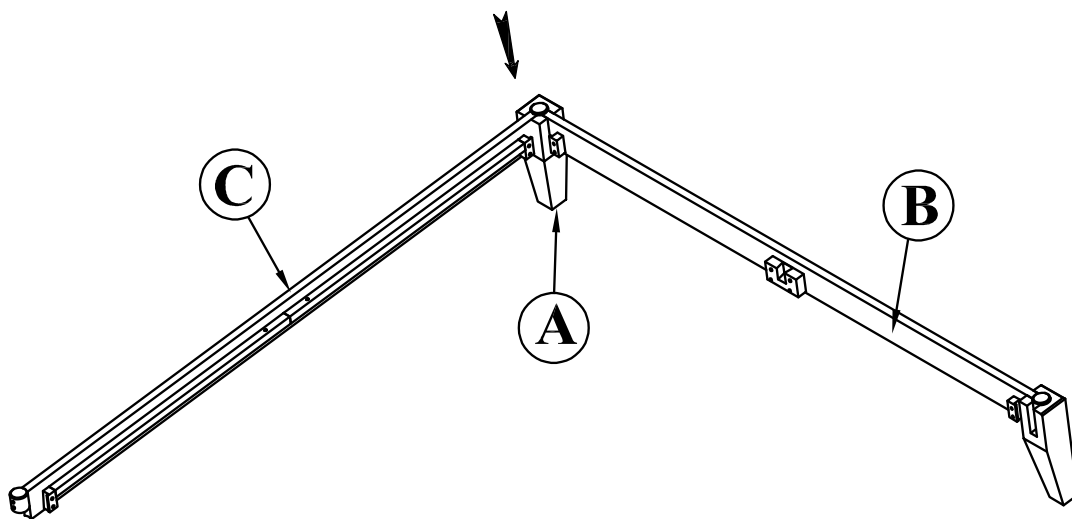


Step 3

Repeat Step 2 for the other Side Rail (C) completely into the Leg (A)

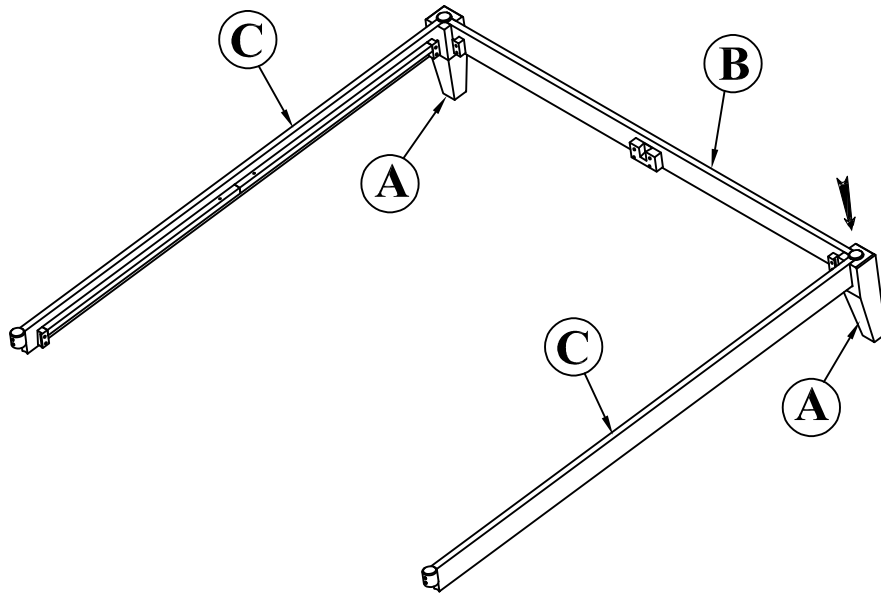


Step 4

Insert the End Rail (B) completely into the Legs (A)

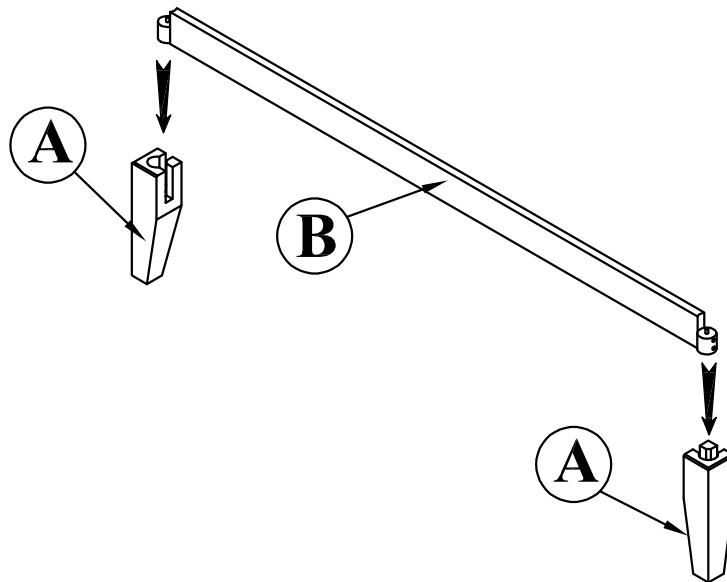


Step 5

Put the assembled Side Rail (C) completely to the leg (A)

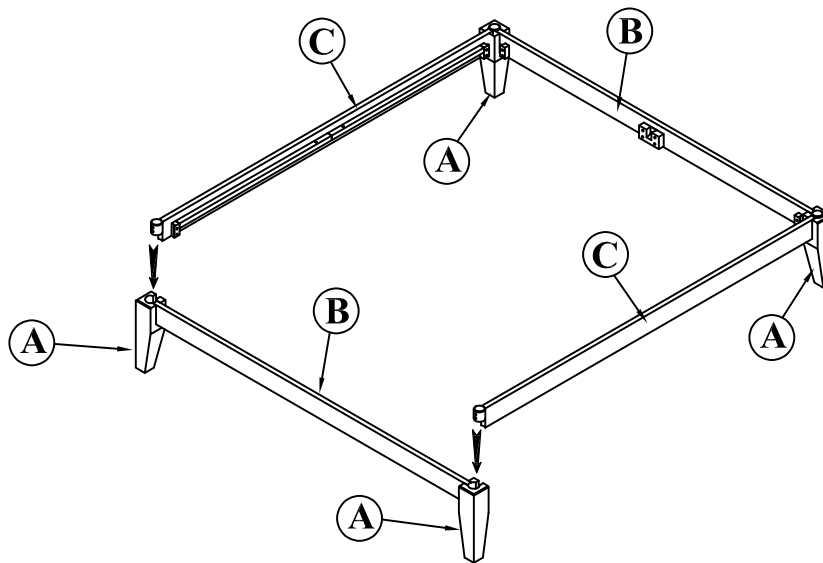


Step 6

Insert the Wooden Wedges (1) completely into the slots.

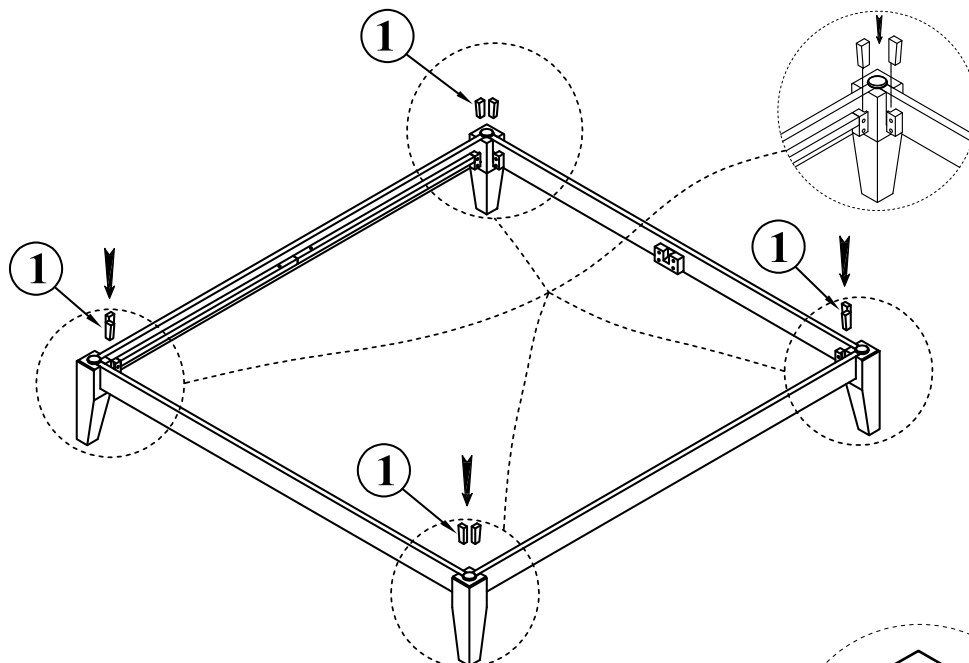


The Wooden Wedges' position is flexible; it will fit naturally to ensure the structure stays stable.

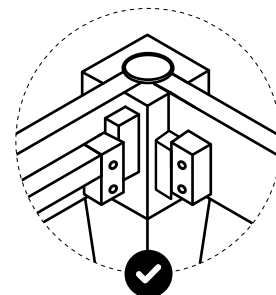


Step 7

Assembly the Support Legs (E) into the Support Rail (D)

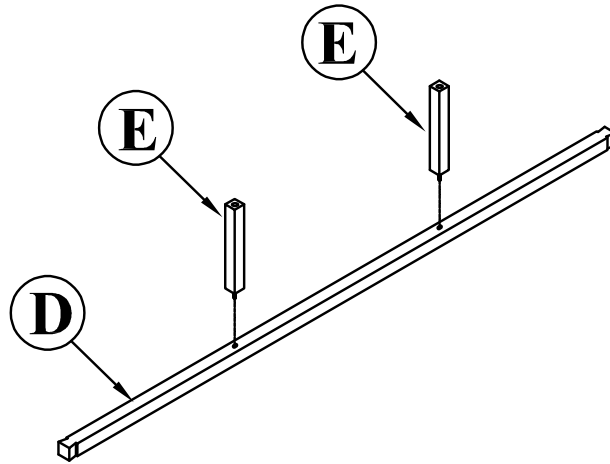


Step 8

Insert the support rails (D) completely into the slots at the End Rails.

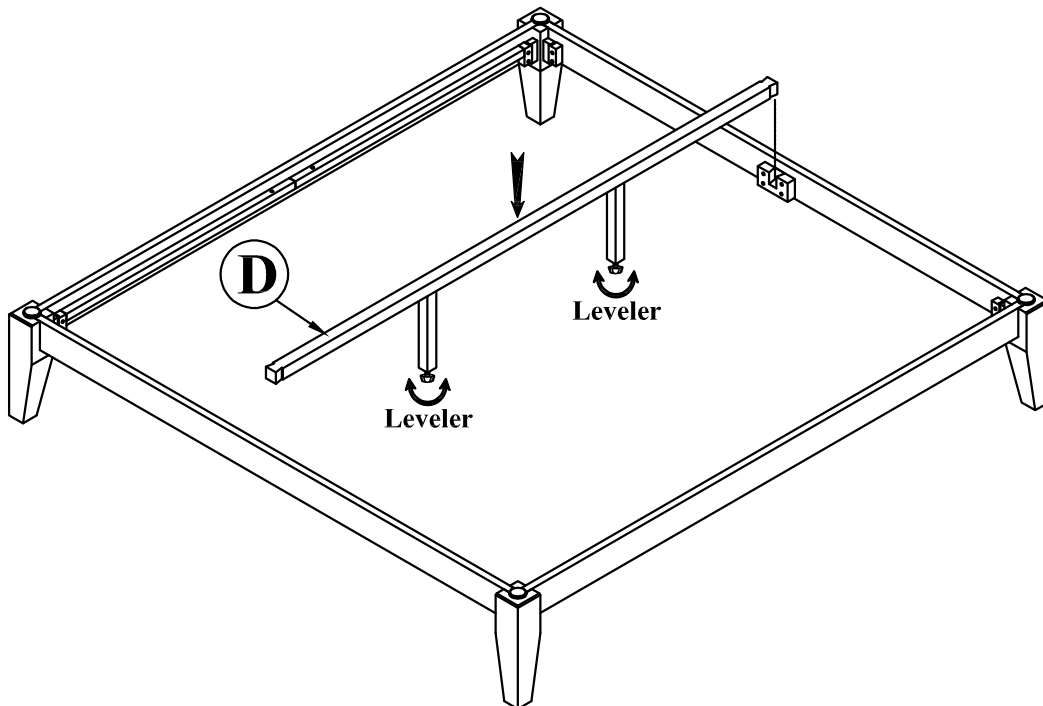


Step 9

Insert the Wood Dowels (2) into the pre-drilled holes

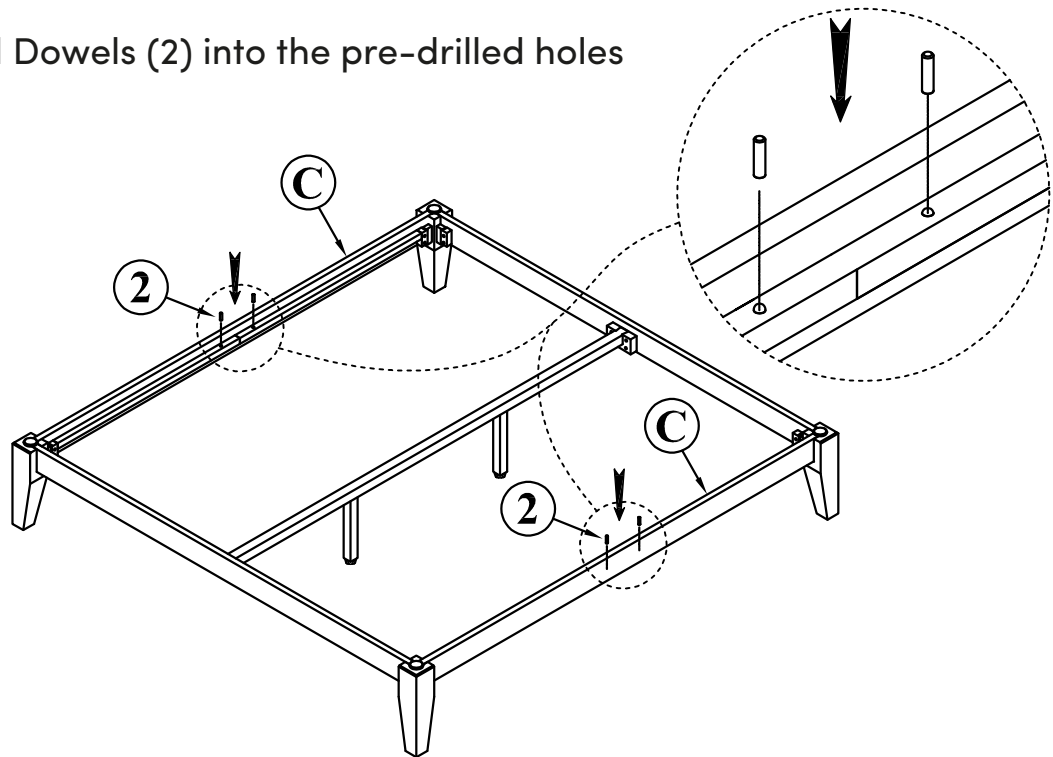


Step 10

Attach the slatted piece with holes (F) to the assembled Wooden Dowel (2) and stretch outward.

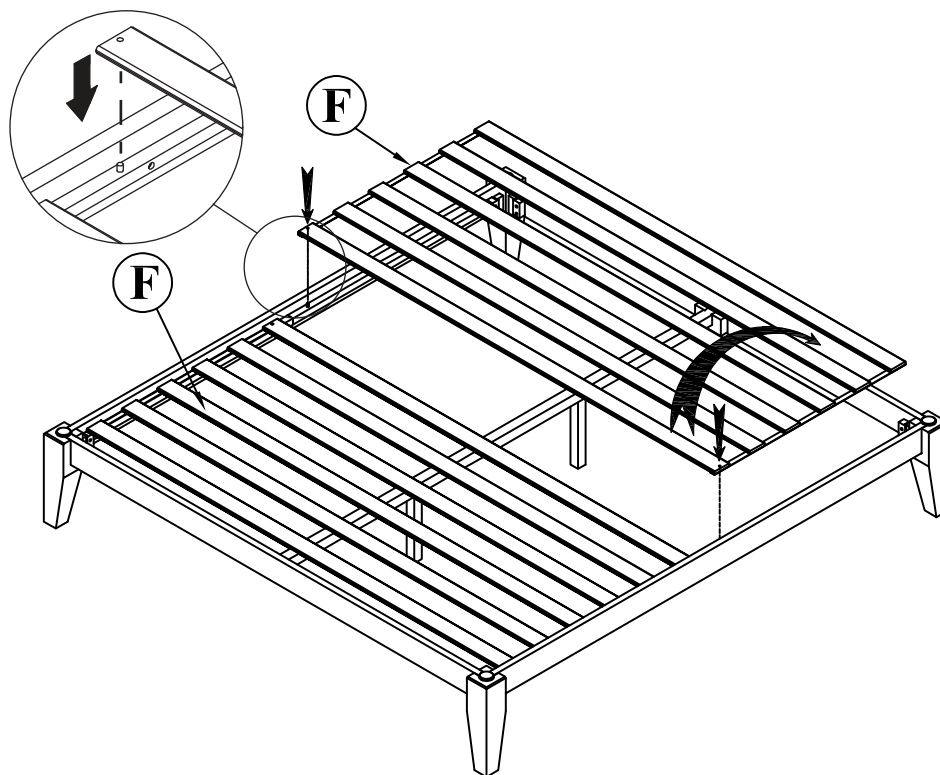

Ready to use

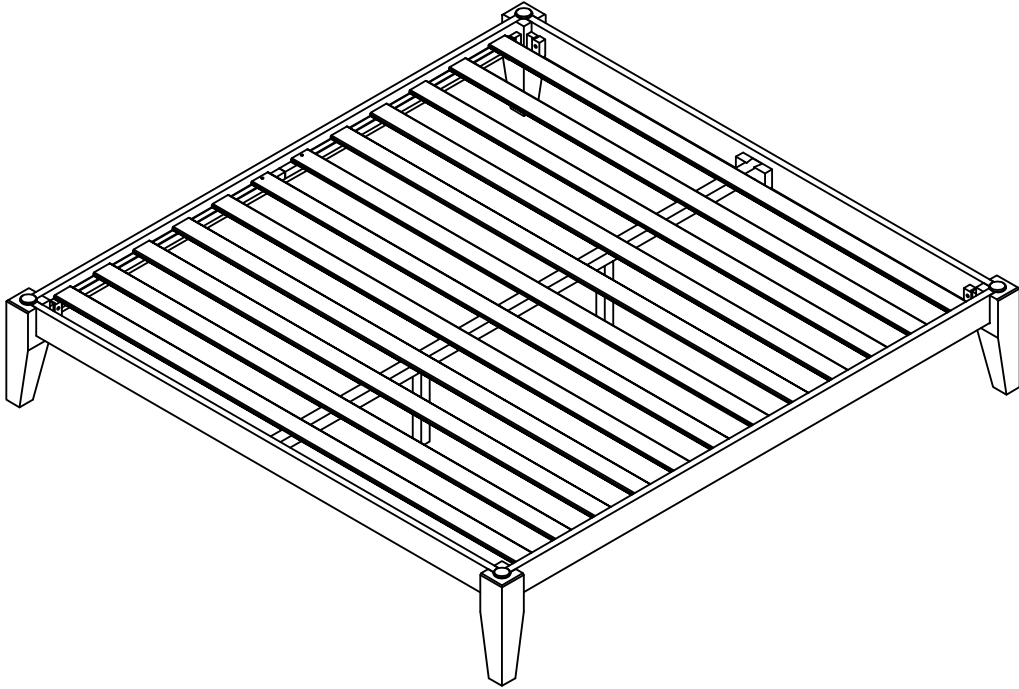

Prioritize safety

For detailed care and maintenance instructions for the bed frame and wood, please visit our website at allforwood.com/product.

| | |
|-------------------|--|
| Proper use | DO NOT - Modify the structure of this product |
| | DO NOT - Use for commercial purposes |
| | DO NOT - Leave spilled liquids on the bed frame |
| | DO NOT - Use the bed frame if it is damaged |
| | DO NOT - Perform temporary repairs |
| | DO NOT - Use outdoors |

The return

Stress-free returns when we take care of it.

Feel free to call us at

1-888-909-5546

or send us a message at

help@allforwood.com.

We'll provide you with a hassle-free replacement at no cost.

Replacement



Give us a call or email



Replacement



You

Return



Re-package item



Schedule pick up



Track package



Replacement



You

We really want to save you the trouble of re-packaging and returning your item, because let's be honest, no one has time for that.

Warranty

This product includes a specific warranty period starting from the purchase date.
To register your product, simply scan the QR code with your phone

Scan me!

For Warranty



Need Help?

Toll-free at 1-888-909-5546

Help@allforwood.com

www.allforwood.com

